



**40V**  
**40Y**  
**50H**

## **OWNER'S MANUAL**

**▲ Read this manual carefully before operating this outboard motor.**

**63B-28199-7D-E0**

EMU25052

**Read this manual carefully before operating this outboard motor. Keep this manual onboard in a waterproof bag when boating. This manual should stay with the outboard motor if it is sold.**

# Important manual information

EMU25105

## To the owner

Thank you for choosing a Yamaha outboard motor. This Owner's Manual contains information needed for proper operation, maintenance and care. A thorough understanding of these simple instructions will help you obtain maximum enjoyment from your new Yamaha. If you have any question about the operation or maintenance of your outboard motor, please consult a Yamaha dealer.

In this Owner's Manual particularly important information is distinguished in the following ways.



: This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

EWMM00781



### **WARNING**

**A WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.**

ECM00701

### **NOTICE**

**A NOTICE indicates special precautions that must be taken to avoid damage to the outboard motor or other property.**

### **TIP:**

A TIP provides key information to make procedures easier or clearer.

Yamaha continually seeks advancements in product design and quality. Therefore, while this manual contains the most current product information available at the time of printing, there may be minor discrepancies between your machine and this manual. If

there is any question concerning this manual, please consult your Yamaha dealer.

To ensure long product life, Yamaha recommends that you use the product and perform the specified periodic inspections and maintenance by correctly following the instructions in the owner's manual. Any damage resulting from neglect of these instructions is not covered by warranty.

Some countries have laws or regulations restricting users from taking the product out of the country where it was purchased, and it may be impossible to register the product in the destination country. Additionally, the warranty may not apply in certain regions. When planning to take the product to another country, consult the dealer where the product was purchased for further information.

If the product was purchased used, please consult your closest dealer for customer re-registration, and to be eligible for the specified services.

### **TIP:**

The 40VEO, 40VETO, 40VMHO, 40YETO, 50HEDO, 50HETO, 50HMHO and the standard accessories are used as a base for the explanations and illustrations in this manual. Therefore some items may not apply to every model.

EMU25121

### **40V, 40Y, 50H OWNER'S MANUAL**

**©2008 by Yamaha Motor Co., Ltd.  
1st Edition, April 2008**

**All rights reserved.**

**Any reprinting or unauthorized use  
without the written permission of  
Yamaha Motor Co., Ltd.  
is expressly prohibited.**

**Printed in Japan**

# Table of contents

---

|                                             |          |                                                                     |           |
|---------------------------------------------|----------|---------------------------------------------------------------------|-----------|
| <b>Safety information.....</b>              | <b>1</b> | Fuel requirements .....                                             | 13        |
| Outboard motor safety .....                 | 1        | Gasoline .....                                                      | 13        |
| Propeller.....                              | 1        | Muddy or acidic water .....                                         | 13        |
| Rotating parts.....                         | 1        | Anti-fouling paint .....                                            | 14        |
| Hot parts .....                             | 1        | Motor disposal requirements.....                                    | 14        |
| Electric shock.....                         | 1        | <b>Components .....</b>                                             | <b>15</b> |
| Power trim and tilt .....                   | 1        | Components diagram.....                                             | 15        |
| Engine shut-off cord (lanyard).....         | 1        | Fuel tank .....                                                     | 17        |
| Gasoline .....                              | 1        | Fuel joint.....                                                     | 18        |
| Gasoline exposure and spills .....          | 2        | Fuel gauge .....                                                    | 18        |
| Carbon monoxide.....                        | 2        | Fuel tank cap.....                                                  | 18        |
| Modifications .....                         | 2        | Air vent screw.....                                                 | 18        |
| <b>Boating safety .....</b>                 | <b>2</b> | Remote control box .....                                            | 18        |
| Alcohol and drugs .....                     | 2        | Remote control lever .....                                          | 18        |
| Personal flotation devices .....            | 2        | Neutral interlock trigger .....                                     | 19        |
| People in the water .....                   | 2        | Neutral throttle lever .....                                        | 19        |
| Passengers .....                            | 2        | Tiller handle.....                                                  | 19        |
| Overloading.....                            | 2        | Gear shift lever .....                                              | 20        |
| Avoid collisions .....                      | 3        | Throttle grip .....                                                 | 20        |
| Weather .....                               | 3        | Throttle indicator .....                                            | 20        |
| Passenger training .....                    | 3        | Throttle friction adjuster.....                                     | 21        |
| Boating safety publications .....           | 3        | Engine shut-off cord (lanyard) and clip.....                        | 21        |
| Laws and regulations .....                  | 3        | Engine stop button .....                                            | 22        |
| <b>General information .....</b>            | <b>4</b> | Choke knob for pull type .....                                      | 22        |
| Identification numbers record .....         | 4        | Manual starter handle .....                                         | 23        |
| Outboard motor serial number .....          | 4        | Main switch .....                                                   | 23        |
| Key number.....                             | 4        | Steering friction adjuster .....                                    | 23        |
| EC Declaration of Conformity (DoC) .....    | 4        | Steering friction adjuster .....                                    | 24        |
| CE Marking .....                            | 4        | Power trim and tilt switch on remote control or tiller handle ..... | 24        |
| Read manuals and labels.....                | 6        | Power trim and tilt switch on bottom engine cowling .....           | 24        |
| Warning labels .....                        | 6        | Trim tab with anode.....                                            | 25        |
| <b>Specifications and requirements.....</b> | <b>9</b> | Trim rod (tilt pin) .....                                           | 25        |
| Specifications .....                        | 9        | Tilt lock mechanism.....                                            | 26        |
| Installation requirements .....             | 11       | Tilt support lever for power trim and tilt model.....               | 26        |
| Boat horsepower rating.....                 | 11       | Tilt support lever for manual tilt model .....                      | 26        |
| Mounting motor .....                        | 11       | Top cowling lock lever(s) (turn type) .....                         | 27        |
| Remote control requirements .....           | 12       | Alert indicator .....                                               | 27        |
| Battery requirements .....                  | 12       | <b>Instruments and indicators.....</b>                              | <b>28</b> |
| Battery specifications .....                | 12       | Indicators .....                                                    | 28        |
| Mounting battery .....                      | 12       |                                                                     |           |
| Multiple batteries .....                    | 12       |                                                                     |           |
| Propeller selection.....                    | 12       |                                                                     |           |
| Start-in-gear protection .....              | 13       |                                                                     |           |
| Engine oil requirements .....               | 13       |                                                                     |           |

# Table of contents

|                                                    |           |                                                                |           |
|----------------------------------------------------|-----------|----------------------------------------------------------------|-----------|
| Alert indicator for three indicators .....         | 28        | Oil level indicator operation .....                            | 45        |
| Overheat-alert indicator .....                     | 28        | Operating engine .....                                         | 46        |
| Digital tachometer .....                           | 28        | Feeding fuel (portable tank) .....                             | 46        |
| Trim meter .....                                   | 29        | Starting engine .....                                          | 47        |
| Hour meter .....                                   | 29        | Checks after starting engine .....                             | 51        |
| Oil level indicator (digital type) .....           | 29        | Cooling water .....                                            | 51        |
| Overheat-alert indicator .....                     | 29        | Warming up engine .....                                        | 52        |
| Analog tachometer .....                            | 30        | Choke start models .....                                       | 52        |
| Oil level indicators (three indicators 2) .....    | 30        | Electric start and prime start models .....                    | 52        |
| Overheat-alert indicator .....                     | 30        | Checks after engine warm-up .....                              | 52        |
| Analog trim meter .....                            | 30        | Shifting .....                                                 | 52        |
| <b>Engine control system.....</b>                  | <b>32</b> | Stop switches .....                                            | 52        |
| Alert system .....                                 | 32        | Shifting .....                                                 | 52        |
| Overheat alert .....                               | 32        | Stopping boat.....                                             | 54        |
| Oil level alert and oil filter clogging alert..... | 33        | Stopping engine.....                                           | 55        |
| <b>Installation .....</b>                          | <b>35</b> | Procedure.....                                                 | 55        |
| Installation .....                                 | 35        | Trimming outboard motor.....                                   | 55        |
| Mounting the outboard motor .....                  | 35        | Adjusting trim angle for manual tilt models.....               | 56        |
| Clamping the outboard motor .....                  | 36        | Adjusting trim angle (Power trim and tilt) .....               | 57        |
| <b>Operation .....</b>                             | <b>38</b> | Adjusting trim angle for hydro tilt models .....               | 58        |
| First-time operation .....                         | 38        | Adjusting boat trim .....                                      | 58        |
| Breaking in engine .....                           | 38        | Tilting up and down.....                                       | 59        |
| Getting to know your boat .....                    | 38        | Procedure for tilting up (manual tilt models).....             | 59        |
| Checks before starting engine .....                | 38        | Procedure for tilting up (hydro tilt models) .....             | 60        |
| Fuel level.....                                    | 39        | Procedure for tilting up (power trim and tilt models).....     | 61        |
| Remove cowling.....                                | 39        | Procedure for tilting down (manual tilt models).....           | 62        |
| Fuel system.....                                   | 39        | Procedure for tilting down (manual and hydro tilt models)..... | 62        |
| Controls.....                                      | 39        | Procedure for tilting down (power trim and tilt models).....   | 63        |
| Engine shut-off cord (lanyard).....                | 40        | Shallow water.....                                             | 63        |
| Oil.....                                           | 40        | Hydro tilt models .....                                        | 63        |
| Engine .....                                       | 40        | Power trim and tilt models .....                               | 64        |
| Operation after long period of storage.....        | 41        | Cruising in other conditions.....                              | 65        |
| Install cowling.....                               | 41        | <b>Maintenance .....</b>                                       | <b>67</b> |
| Power trim and tilt system .....                   | 42        | Transporting and storing outboard motor .....                  | 67        |
| Battery.....                                       | 42        |                                                                |           |
| Filling fuel and engine oil.....                   | 42        |                                                                |           |
| Filling fuel for portable tank.....                | 42        |                                                                |           |
| Filling oil for manual starter model .....         | 43        |                                                                |           |
| Filling oil for electric start models .....        | 43        |                                                                |           |

# Table of contents

---

|                                                       |           |
|-------------------------------------------------------|-----------|
| Clamp screw mounting models .....                     | 67        |
| Storing outboard motor .....                          | 67        |
| Procedure .....                                       | 68        |
| Lubrication (oil injection models) .....              | 69        |
| Cleaning the outboard motor .....                     | 69        |
| Checking painted surface of<br>motor .....            | 69        |
| Periodic maintenance .....                            | 69        |
| Replacement parts .....                               | 69        |
| Severe operating conditions .....                     | 70        |
| Maintenance chart 1 .....                             | 71        |
| Maintenance chart 2 .....                             | 73        |
| Greasing .....                                        | 74        |
| Cleaning and adjusting spark<br>plug .....            | 75        |
| Checking fuel filter .....                            | 76        |
| Inspecting idling speed .....                         | 77        |
| Checking water in engine oil<br>tank .....            | 77        |
| Checking wiring and connectors .....                  | 77        |
| Checking propeller .....                              | 78        |
| Removing propeller .....                              | 78        |
| Installing propeller .....                            | 79        |
| Changing gear oil .....                               | 79        |
| Cleaning fuel tank .....                              | 80        |
| Inspecting and replacing<br>anode(s) .....            | 81        |
| Checking battery (for electric start<br>models) ..... | 82        |
| Connecting the battery .....                          | 82        |
| Disconnecting the battery .....                       | 83        |
| <b>Trouble Recovery .....</b>                         | <b>84</b> |
| Troubleshooting .....                                 | 84        |
| Temporary action in emergency .....                   | 87        |
| Impact damage .....                                   | 87        |
| Replacing fuse .....                                  | 87        |
| Power trim and tilt will not<br>operate .....         | 88        |
| Starter will not operate .....                        | 88        |
| Emergency starting engine .....                       | 89        |
| Engine fails to operate .....                         | 90        |
| Cold engine fails to start .....                      | 90        |
| Treatment of submerged motor .....                    | 91        |

EMU33622

## Outboard motor safety

Observe these precautions at all times.

EMU336500

### Propeller

People can be injured or killed if they come in contact with the propeller. The propeller can keep moving even when the motor is in neutral, and sharp edges of the propeller can cut even when stationary.

- Shut off the engine when a person is in the water near you.
- Keep people out of reach of the propeller, even when the engine is off.

EMU33630

### Rotating parts

Hands, feet, hair, jewelry, clothing, PFD straps, etc. can become entangled with internal rotating parts of the engine, resulting in serious injury or death.

Keep the top cowling in place whenever possible. Do not remove or replace the cowling with the engine running.

Only operate the engine with the cowling removed according to the specific instructions in the manual. Keep hands, feet, hair, jewelry, clothing, PFD straps, etc. away from any exposed moving parts.

EMU33640

### Hot parts

During and after operation, engine parts are hot enough to cause burns. Avoid touching any parts under the top cowling until the engine has cooled.

EMU33650

### Electric shock

Do not touch any electrical parts while starting or operating the engine. They can cause shock or electrocution.

EMU33660

### Power trim and tilt

Body parts can be crushed between the mo-

tor and the clamp bracket when the motor is trimmed or tilted. Keep body parts out of this area at all times. Be sure no one is in this area before operating the power trim and tilt mechanism.

The power trim and tilt switches operate even when the main switch is off. Keep people away from the switches whenever working around the motor.

Never get under the lower unit while it is tilted, even when the tilt support lever is locked. Severe injury could occur if the outboard motor accidentally falls.

EMU33671

### Engine shut-off cord (lanyard)

Attach the engine shut-off cord so that the engine stops if the operator falls overboard or leaves the helm. This prevents the boat from running away under power and leaving people stranded, or running over people or objects.

Always attach the engine shut-off cord to a secure place on your clothing or your arm or leg while operating. Do not remove it to leave the helm while the boat is moving. Do not attach the cord to clothing that could tear loose, or route the cord where it could become entangled, preventing it from functioning.

Do not route the cord where it is likely to be accidentally pulled out. If the cord is pulled during operation, the engine will shut off and you will lose most steering control. The boat could slow rapidly, throwing people and objects forward.

EMU33810

### Gasoline

**Gasoline and its vapors are highly flammable and explosive.** Always, refuel according to the procedure on page 46 to reduce the risk of fire and explosion.

# Safety information

---

EMU33820

## **Gasoline exposure and spills**

Take care not to spill gasoline. If gasoline spills, wipe it up immediately with dry rags. Dispose of rags properly.

If any gasoline spills onto your skin, immediately wash with soap and water. Change clothing if gasoline spills on it.

If you swallow gasoline, inhale a lot of gasoline vapor, or get gasoline in your eyes, get immediate medical attention. Never siphon fuel by mouth.

EMU33900

## **Carbon monoxide**

This product emits exhaust gases which contain carbon monoxide, a colorless, odorless gas which may cause brain damage or death when inhaled. Symptoms include nausea, dizziness, and drowsiness. Keep cockpit and cabin areas well ventilated. Avoid blocking exhaust outlets.

EMU33780

## **Modifications**

Do not attempt to modify this outboard motor. Modifications to your outboard motor may reduce safety and reliability, and render the outboard unsafe or illegal to use.

EMU33740

## **Boating safety**

This section includes a few of the many important safety precautions that you should follow when boating.

EMU33710

## **Alcohol and drugs**

Never operate after drinking alcohol or taking drugs. Intoxication is one of the most common factors contributing to boating fatalities.

EMU33720

## **Personal flotation devices**

Have an approved personal flotation device (PFD) on board for every occupant. Yamaha

recommends that you must wear a PFD whenever boating. At a minimum, children and non-swimmers should always wear PFDs, and everyone should wear PFDs when there are potentially hazardous boating conditions.

EMU33730

## **People in the water**

Always watch carefully for people in the water, such as swimmers, skiers, or divers, whenever the engine is running. When someone is in the water near the boat, shift into neutral and shut off the motor.

Stay away from swimming areas. Swimmers can be hard to see.

The propeller can keep moving even when the motor is in neutral. Shut off the engine when a person is in the water near you.

EMU33750

## **Passengers**

Consult your boat manufacturer's instructions for details about appropriate passenger locations in your boat and be sure all passengers are positioned properly before accelerating and when operating above an idle speed. Standing or sitting in non-designated locations may result in being thrown either overboard or within the boat due to waves, wakes, or sudden changes in speed or direction. Even when people are positioned properly, alert your passengers if you must make any unusual maneuver. Always avoid jumping waves or wakes.

EMU33760

## **Overloading**

Do not overload the boat. Consult the boat capacity plate or boat manufacturer for maximum weight and number of passengers. Be sure that weight is properly distributed according to the boat manufacturers instructions. Overloading or incorrect weight distribution can compromise the boats handling.




ding and lead to an accident, capsizing or swamping.

EMU33771

### Avoid collisions

**Scan constantly** for people, objects, and other boats. Be alert for conditions that limit your visibility or block your vision of others.

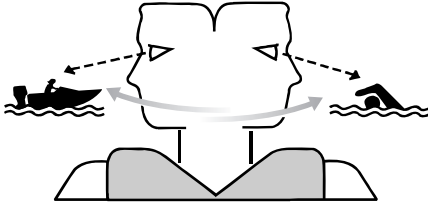

ZMU06025

**Operate defensively** at safe speeds and keep a safe distance away from people, objects, and other boats.

- Do not follow directly behind other boats or waterskiers.
- Avoid sharp turns or other maneuvers that make it hard for others to avoid you or understand where you are going.
- Avoid areas with submerged objects or shallow water.
- Ride within your limits and avoid aggressive maneuvers to reduce the risk of loss of control, ejection, and collision.
- **Take early action** to avoid collisions. Remember, **boats do not have brakes**, and stopping the engine or reducing throttle can reduce the ability to steer. If you are not sure that you can stop in time before hitting an obstacle, apply throttle and turn in another direction.

EMU33790

### Weather

Stay informed about the weather. Check weather forecasts before boating. Avoid

boating in hazardous weather.

EMU33880

### Passenger training

Make sure at least one other passenger is trained to operate the boat in the event of an emergency.

EMU33890

### Boating safety publications

Be informed about boating safety. Additional publications and information can be obtained from many boating organizations.

EMU33600

### Laws and regulations

Know the marine laws and regulations where you will be boating- and obey them. Several sets of rules prevail according to geographic location, but all are basically the same as the International Rules of the Road.

# General information

EMU25171

## Identification numbers record

EMU25183


### Outboard motor serial number

The outboard motor serial number is stamped on the label attached to the port side of the clamp bracket.

Record your outboard motor serial number in the spaces provided to assist you in ordering spare parts from your Yamaha dealer or for reference in case your outboard motor is stolen.

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|--|--|--|--|

ZMU01693

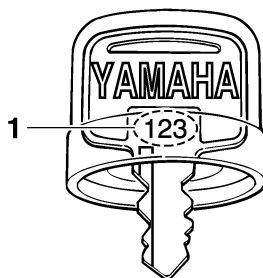

ZMU01694

1. Key number

EMU37290

## EC Declaration of Conformity (DoC)

This outboard motor conforms to certain portions of the European Parliament directive relating to machinery.


Each conformed outboard motor accompanied with EC DoC. EC DoC contains the following information;

- Name of Engine Manufacture
- Model name
- Product code of model (Approved model code)
- Code of conformed directives

EMU25203


## CE Marking

Outboard motors affixed with this “CE” marking conform with the directives of; 98/37/EC, 94/25/EC - 2003/44/EC and 2004/108/EC.

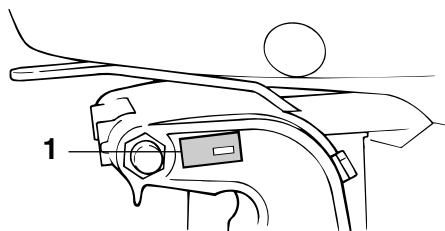

ZMU02931

1. Outboard motor serial number location

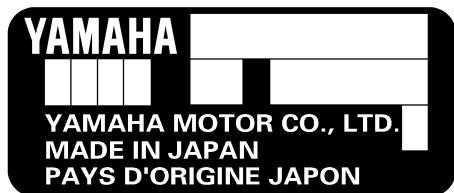


ZMU01692

EMU25190

### Key number

If a main key switch is equipped with the motor, the key identification number is stamped on your key as shown in the illustration. Record this number in the space provided for reference in case you need a new key.

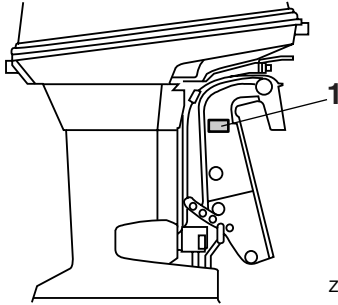

ZMU04889

1. CE marking location



ZMU06040

# General information

---

EMU33520

## Read manuals and labels

Before operating or working on this motor:


- Read this manual.
- Read any manuals supplied with the boat.
- Read all labels on the outboard motor and the boat.

If you need any additional information, contact your Yamaha dealer.

EMU33831

## Warning labels

If these labels are damaged or missing, contact your Yamaha dealer for replacements.

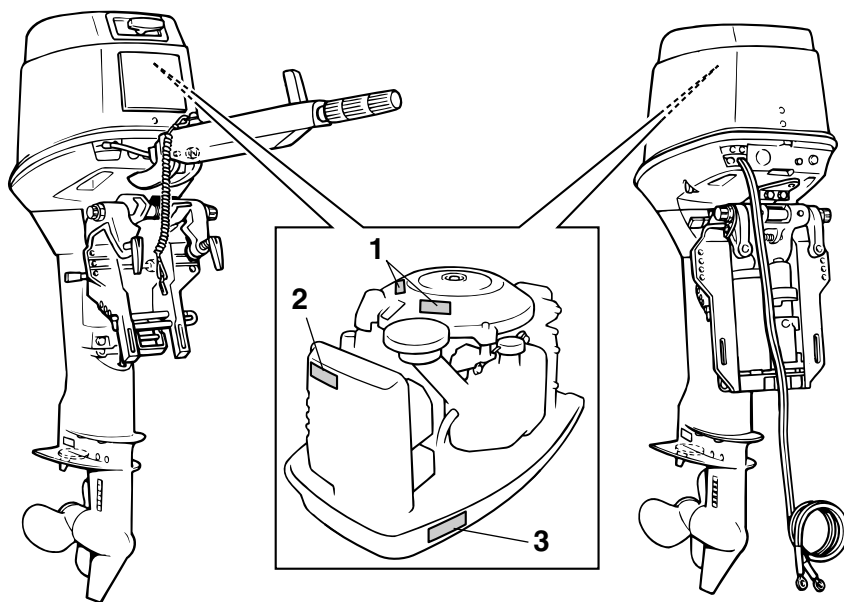


ZMU06186



1



2

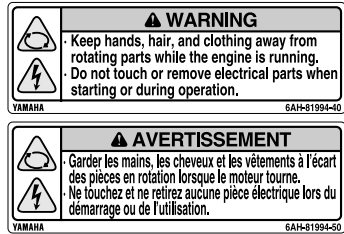

3

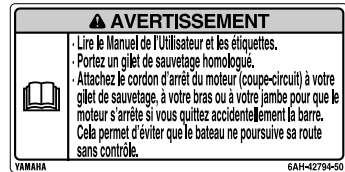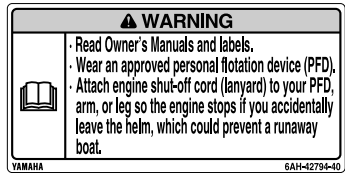

ZMU05706

EMU33912

## Contents of labels

The above warning labels mean as follows.

1

EWM01691



Emergency starting does not have start-in-gear protection. Ensure shift control is in neutral before starting engine.

2

EWM01681



- Keep hands, hair, and clothing away from rotating parts while the engine is running.
- Do not touch or remove electrical parts when starting or during operation.

3

EWM01671



- Read Owner's Manuals and labels.
- Wear an approved personal flotation device (PFD).
- Attach engine shut-off cord (lanyard) to your PFD, arm, or leg so the engine stops if you accidentally leave the helm, which could prevent a runaway boat.

# General information

---

EMU33843

## Symbols


The following symbols mean as follows.

Notice/Warning




ZMU05696

Read Owner's Manual

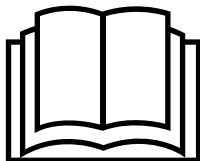


ZMU05664

Hazard caused by continuous rotation

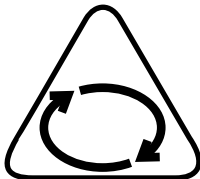

ZMU05665

Electrical hazard

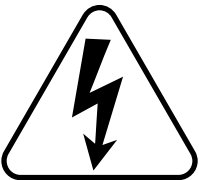


ZMU05666

Remote control lever/gear shift lever operating direction, dual direction



ZMU05667

Engine start/ Engine cranking

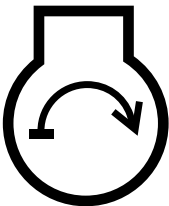

ZMU05668

# Specifications and requirements

EMU31480

## Specifications

### TIP:

“(AL)” stated in the specification data below represents the numerical value for the aluminum propeller installed.

Likewise, “(SUS)” represents the value for stainless steel propeller installed and “(PL)” for plastic propeller installed.

EMU2821C

### Dimension:

#### Overall length:

40VEO 670 mm (26.4 in)  
40VETO 646 mm (25.4 in)  
40VMHO 1281 mm (50.4 in)  
40YETO 646 mm (25.4 in)  
50HEDO 670 mm (26.4 in)  
50HETO 670 mm (26.4 in)  
50HMHO 1281 mm (50.4 in)

#### Overall width:

40VEO 349 mm (13.7 in)  
40VETO 350 mm (13.8 in)  
40VMHO 349 mm (13.7 in)  
40YETO 350 mm (13.8 in)  
50HEDO 360 mm (14.2 in)  
50HETO 360 mm (14.2 in)  
50HMHO 349 mm (13.7 in)

#### Overall height S:

40VEO 1192 mm (46.9 in)  
40VMHO 1223 mm (48.1 in)  
50HMHO 1223 mm (48.1 in)

#### Overall height L:

40VEO 1319 mm (51.9 in)  
40VETO 1319 mm (51.9 in)  
40VMHO 1350 mm (53.1 in)  
40YETO 1319 mm (51.9 in)  
50HEDO 1319 mm (51.9 in)  
50HETO 1319 mm (51.9 in)

#### Transom height S:

40VEO 406 mm (16.0 in)

40VMHO 406 mm (16.0 in)

50HMHO 406 mm (16.0 in)

#### Transom height L:

40VEO 533 mm (21.0 in)  
40VETO 533 mm (21.0 in)  
40VMHO 533 mm (21.0 in)  
40YETO 533 mm (21.0 in)  
50HEDO 533 mm (21.0 in)  
50HETO 533 mm (21.0 in)

#### Weight (AL) S:

40VEO 74.5 kg (164 lb)  
40VMHO 75.8 kg (167 lb)  
50HMHO 75.0 kg (165 lb)

#### Weight (AL) L:

40VEO 77.3 kg (170 lb)  
40VETO 88.0 kg (194 lb)  
40VMHO 77.5 kg (171 lb)  
40YETO 88.0 kg (194 lb)  
50HEDO 84.5 kg (186 lb)  
50HETO 88.0 kg (194 lb)

### Performance:

#### Full throttle operating range:

4500–5500 r/min

#### Maximum output:

40VEO 29.4 kW@5000 r/min  
(40 HP@5000 r/min)  
40VETO 29.4 kW@5000 r/min  
(40 HP@5000 r/min)  
40VMHO 29.4 kW@5000 r/min  
(40 HP@5000 r/min)  
40YETO 29.4 kW@5000 r/min  
(40 HP@5000 r/min)  
50HEDO 36.8 kW@5000 r/min  
(50 HP@5000 r/min)  
50HETO 36.8 kW@5000 r/min  
(50 HP@5000 r/min)  
50HMHO 36.8 kW@5000 r/min  
(50 HP@5000 r/min)

#### Idling speed (in neutral):

800 ±50 r/min

# Specifications and requirements

---

## Engine:

### Type:

2-stroke L

### Displacement:

698.0 cm<sup>3</sup>

### Bore × stroke:

67.0 × 66.0 mm (2.64 × 2.60 in)

### Ignition system:

CDI

### Spark plug (NGK):

40VEO B7HS-10

40VETO B7HS-10

40VMHO B7HS-10

40YETO B8HS-10

50HEDO B8HS-10

50HETO B8HS-10

50HMH0 B8HS-10

### Spark plug with resistor (NGK):

40VEO BR7HS-10

40VETO BR7HS-10

40VMHO BR7HS-10

40YETO BR8HS-10

50HEDO BR8HS-10

50HETO BR8HS-10

50HMH0 BR8HS-10

### Spark plug gap:

0.9–1.0 mm (0.035–0.039 in)

### Spark plug gap:

0.9–1.0 mm (0.035–0.039 in)

### Control system:

40VEO Remote control

40VETO Remote control

40VMHO Tiller

40YETO Remote control

50HEDO Remote control

50HETO Remote control

50HMH0 Tiller

### Starting system:

40VEO Electric

40VETO Electric

40VMHO Manual

40YETO Electric

50HEDO Electric

50HETO Electric

50HMH0 Manual

### Starting carburetion system:

40VEO Prime start

40VETO Prime start

40VMHO Choke valve

40YETO Prime start

50HEDO Prime start

50HETO Prime start

50HMH0 Choke valve

### Min. cold cranking amps (CCA/EN):

40VEO 347.0 A

40VETO 347.0 A

40YETO 347.0 A

50HEDO 347.0 A

50HETO 347.0 A

### Min. rated capacity (20HR/IEC):

40VEO 40.0 Ah

40VETO 40.0 Ah

40YETO 40.0 Ah

50HEDO 40.0 Ah

50HETO 40.0 Ah

### Alternator output:

40VMHO 80 W

50HMH0 80 W

### Maximum generator output:

40VEO 6.0 A

40VETO 6.0 A

40YETO 6.0 A

50HEDO 6.0 A

50HETO 6.0 A

## Drive unit:

### Gear positions:

Forward-neutral-reverse

### Gear ratio:

1.85 (24/13)

### Trim and tilt system:

40VEO Manual tilt

40VETO Power trim and tilt



# Specifications and requirements

40VMHO Manual tilt  
40YETO Power trim and tilt  
50HEDO Hydro tilt  
50HETO Power trim and tilt  
50HMHO Manual tilt

Propeller mark:

G

## Fuel and oil:

Recommended fuel:

Regular unleaded gasoline

Min. research octane:

40VEO 90

40VMHO 90

40YETO 90

50HEDO 90

50HETO 90

50HMHO 90

Fuel tank capacity:

24 L (6.34 US gal, 5.28 Imp.gal),

25 L (6.60 US gal, 5.50 Imp.gal)

Recommended engine oil:

YAMALUBE 2-stroke outboard motor oil

Lubrication:

Oil injection

Engine oil tank capacity:

1.5 L (1.59 US qt, 1.32 Imp.qt)

Recommended gear oil:

Hypoid gear oil SAE#90

Gear oil quantity:

0.430 L (0.455 US qt, 0.378 Imp.qt)

## Tightening torque for engine:

Spark plug:

25.0 Nm (2.55 kgf-m, 18.4 ft-lb)

Propeller nut:

35.0 Nm (3.57 kgf-m, 25.8 ft-lb)

## Noise and vibration level:

Operator sound pressure level (ICOMIA 39/94 and 40/94):

40VEO 89.5 dB(A)

40VMHO 89.5 dB(A)

40YETO 89.5 dB(A)

Sound power level (ICOMIA 39/94 and 40/94):

40VEO 97.4 dB(A)

40VMHO 97.4 dB(A)

40YETO 97.4 dB(A)

Vibration on tiller handle (ICOMIA 38/94):

40VEO Vibration on tiller handle is under 2.5 m/s<sup>2</sup>

40VMHO Vibration on tiller handle is under 2.5 m/s<sup>2</sup>

40YETO Vibration on tiller handle is under 2.5 m/s<sup>2</sup>

EMU33553

## Installation requirements

EMU33563

### Boat horsepower rating

EWM01560



**WARNING**

**Overpowering a boat can cause severe instability.**

Before installing the outboard motor(s), confirm that the total horsepower of your motor(s) does not exceed the boat's maximum horsepower rating. See the boat's capacity plate or contact the manufacturer.

EMU33571

### Mounting motor

EWM01570



**WARNING**

- **Improper mounting of the outboard motor could result in hazardous conditions such as poor handling, loss of control, or fire hazards.**
- **Because the motor is very heavy, special equipment and training is required to mount it safely.**

Your dealer or other person experienced in proper rigging should mount the motor using correct equipment and complete rigging instructions. For further information, see page

# Specifications and requirements

35.

EMU33581

## Remote control requirements

EWMO1580



**WARNING**

- If the engine starts in gear, the boat can move suddenly and unexpectedly, possibly causing a collision or throwing passengers overboard.
- If the engine ever starts in gear, the start-in-gear protection device is not working correctly and you should discontinue using the outboard. Contact your Yamaha dealer.

The remote control unit must be equipped with a start-in-gear protection device(s). This device prevents the engine from starting unless it is in neutral.

EMU25694

## Battery requirements

EMU25721

### Battery specifications

Minimum cold cranking amps (CCA/EN):

40VEO 347.0 A

40VETO 347.0 A

40YETO 347.0 A

50HEDO 347.0 A

50HETO 347.0 A

Minimum rated capacity (20HR/IEC):

40VEO 40.0 Ah

40VETO 40.0 Ah

40YETO 40.0 Ah

50HEDO 40.0 Ah

50HETO 40.0 Ah

The engine cannot be started if battery voltage is too low.

EMU36290

### Mounting battery

Mount the battery holder securely in a dry, well-ventilated, vibration-free location in the

boat. **WARNING! Do not put flammable items, or loose heavy or metal objects in the same compartment as the battery. Fire, explosion or sparks could result.**

[EWM01820]

EMU36300

### Multiple batteries

To connect multiple batteries, such as for multiple engine configurations or for an accessory battery, consult your Yamaha dealer about battery selection and correct wiring.

EMU34191

## Propeller selection


Next to selecting an outboard, choosing the right propeller is one of the most important purchasing decisions a boater can make. The type, size, and design of your propeller have a direct impact on acceleration, top speed, fuel economy, and even engine life. Yamaha designs and manufactures propellers for every Yamaha outboard motor and every application.

Your outboard motor came with a Yamaha propeller chosen to perform well over a range of applications, but there may be uses where a different propeller would be more appropriate.

Your Yamaha dealer can help you select the right propeller for your boating needs. Select a propeller that will allow the engine to reach the middle or upper half of the operating range at full throttle with the maximum boat-load. Generally, chose a larger pitch propeller for a smaller operating load and a smaller pitch propeller for a heavier load. If you carry loads that vary widely, chose the propeller that lets the engine run in the proper range for your maximum load but remember that you may need to reduce your throttle setting to stay within the recommended engine speed range when carrying lighter loads.


# Specifications and requirements

For instructions on propeller removal and installation, see page 78.

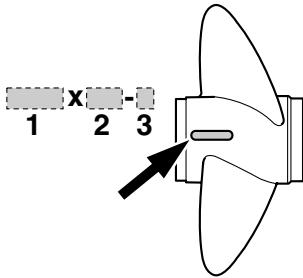

ZMU04606

1. Propeller diameter in inches
2. Propeller pitch in inches
3. Type of propeller (propeller mark)

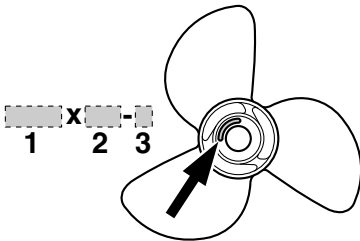

ZMU04607

1. Propeller diameter in inches
2. Propeller pitch in inches
3. Type of propeller (propeller mark)

EMU25770

## Start-in-gear protection

Yamaha outboard motors or Yamaha-approved remote control units are equipped with start-in-gear protection device(s). This feature permits the engine to be started only when it is in neutral. Always select neutral before starting the engine.

EMU25651

## Engine oil requirements

Recommended engine oil:  
YAMALUBE 2-stroke outboard motor oil

If the recommended engine oil is not available, another 2-stroke engine oil with an NMMA-certified TC-W3 rating may be used.

EMU36360

## Fuel requirements

EMU36801

### Gasoline

Use a good quality gasoline that meets the minimum octane rating. If knocking or ping-ing occurs, use a different brand of gasoline or premium unleaded fuel.

Recommended gasoline:  
Regular unleaded gasoline with a minimum octane rating of 90 (Research Octane Number).

ECM01980

### NOTICE

- Do not use leaded gasoline. Leaded gasoline can seriously damage the engine.
- Avoid getting water and contaminants in the fuel tank. Contaminated fuel can cause poor performance or engine damage. Use only fresh gasoline that has been stored in clean containers.

EMU36880

## Muddy or acidic water

Yamaha strongly recommends that you have your dealer install the optional chromium-plated water pump kit if you use the outboard motor in muddy or acidic water conditions. However, depending on the model it might not be required.

# Specifications and requirements


---

EMU36330

## Anti-fouling paint

A clean hull improves boat performance. The boat bottom should be kept as clean of marine growth as possible. If necessary, the boat bottom can be coated with an anti-fouling paint approved for your area to inhibit marine growth.

Do not use anti-fouling paint which includes copper or graphite. These paints can cause more rapid engine corrosion.

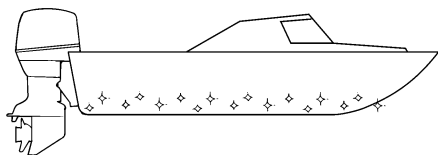

ZMU05176

EMU36340

## Motor disposal requirements

Never illegally discard (dump) the motor. Yamaha recommends consulting the dealer about discarding the motor.


EMU2579H

## Components diagram

### TIP:

\* May not be exactly as shown; also may not be included as standard equipment on all models.

**40VMHO, 50HMHO**

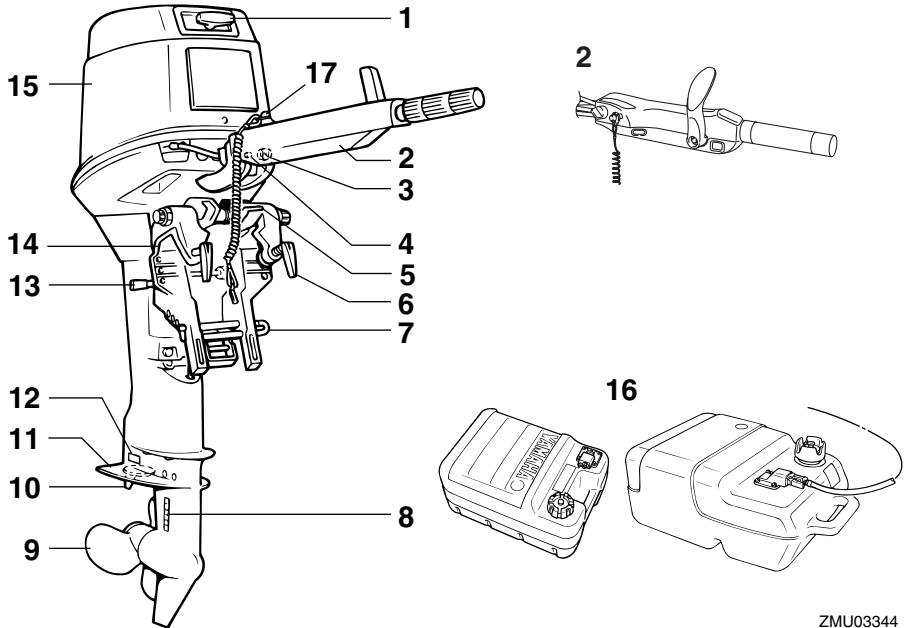




1. Manual starter handle
2. Tiller handle\*
3. Choke knob
4. Alert indicator
5. Tilt lock lever
6. Clamp screw
7. Trim rod
8. Cooling water inlet
9. Propeller
10. Trim tab (anode)
11. Anti-cavitation plate
12. Anode
13. Tilt support lever
14. Clamp bracket
15. Top cowling

16. Fuel tank\*
17. Clip

ZMU03344

# Components



## 40VEO

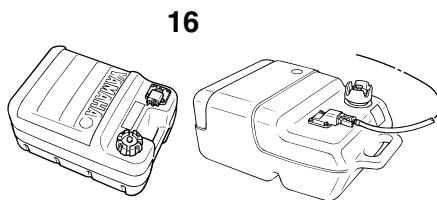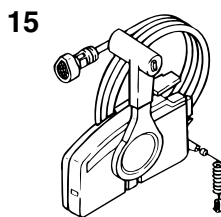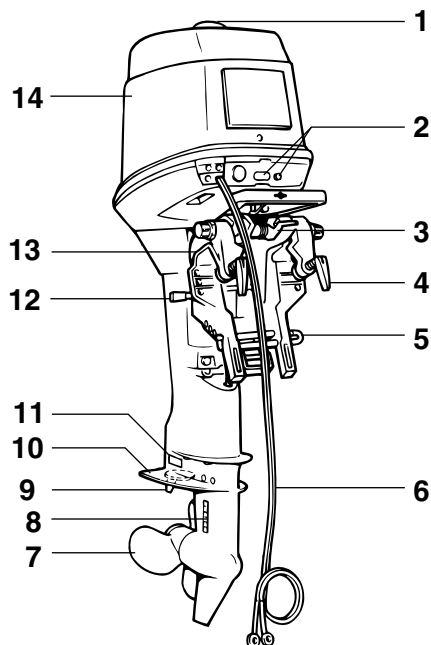

1. Oil tank filler cap
2. Alert indicator(s)
3. Tilt lock lever
4. Clamp screw
5. Trim rod
6. Battery cable
7. Propeller
8. Cooling water inlet
9. Trim tab (anode)
10. Anti-cavitation plate
11. Anode
12. Tilt support lever
13. Clamp bracket
14. Top cowling
15. Remote control box (side mount type)\*
16. Fuel tank\*

ZMU03346

## 40VETO, 40YETO, 50HEDO, 50HETO

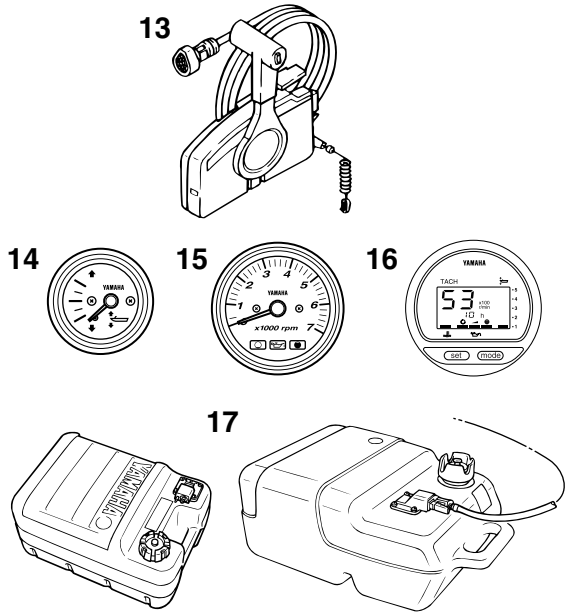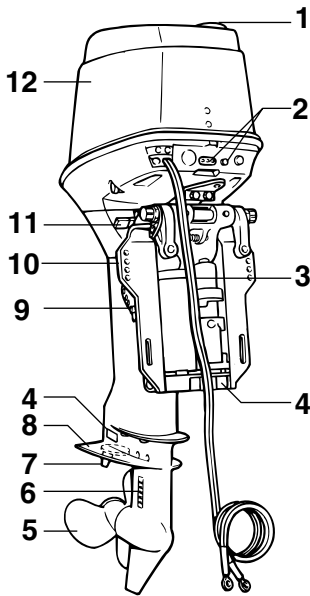

ZMU04548

1. Oil tank filler cap
2. Alert indicator(s)\*
3. Battery cable
4. Anode(s)
5. Propeller
6. Cooling water inlet
7. Trim tab (anode)
8. Anti-cavitation plate
9. Trim rod
10. Clamp bracket
11. Tilt support lever
12. Top cowling
13. Remote control box (side mount type)\*
14. Trim meter\*
15. Tachometer\*
16. Digital tachometer\*
17. Fuel tank\*

EMU25802

### Fuel tank


If your model was equipped with a portable fuel tank, its function is as follows.

EWV00020


### **WARNING**

**The fuel tank supplied with this engine is its dedicated fuel reservoir and must not be used as a fuel storage container. Commercial users should conform to relevant licensing or approval authority regulations.**

# Components

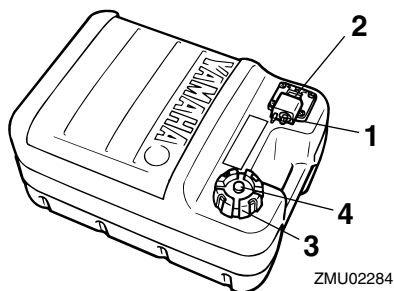

1. Fuel joint
2. Fuel gauge
3. Fuel tank cap
4. Air vent screw

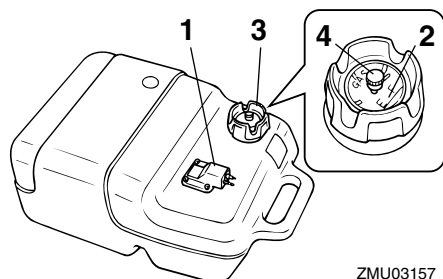

1. Fuel joint
2. Fuel gauge
3. Fuel tank cap
4. Air vent screw

EMU25830

## Fuel joint

This joint is used to connect the fuel line.

EMU25841

## Fuel gauge

This gauge is located on either the fuel tank cap or on the fuel joint base. It shows the approximate amount of fuel remaining in the tank.

EMU25850

## Fuel tank cap

This cap seals the fuel tank. When removed,

the tank can be filled with fuel. To remove the cap, turn it counterclockwise.

EMU25860


## Air vent screw

This screw is on the fuel tank cap. To loosen the screw, turn it counterclockwise.

EMU26181

## Remote control box

The remote control lever actuates both the shifter and the throttle. The electrical switches are mounted on the remote control box.

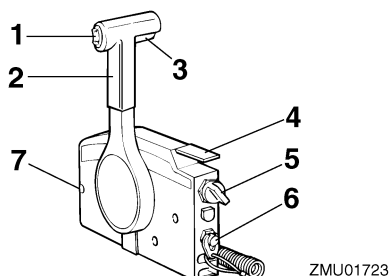


1. Power trim and tilt switch
2. Remote control lever
3. Neutral interlock trigger
4. Neutral throttle lever
5. Main switch / choke switch
6. Engine shut-off switch
7. Throttle friction adjuster

EMU26190

## Remote control lever

Moving the lever forward from the neutral position engages forward gear. Pulling the lever back from neutral engages reverse. The engine will continue to run at idle until the lever is moved about 35° (a detent can be felt). Moving the lever farther opens the throttle, and the engine will begin to accelerate.



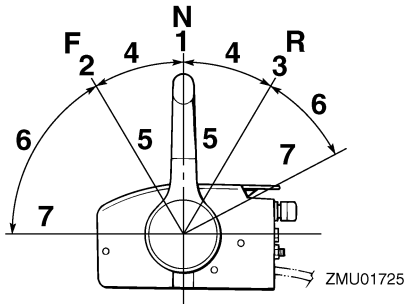


1. Neutral "N"
2. Forward "F"
3. Reverse "R"
4. Shift
5. Fully closed
6. Throttle
7. Fully open

EMU26201

## Neutral interlock trigger

To shift out of neutral, first pull the neutral interlock trigger up.

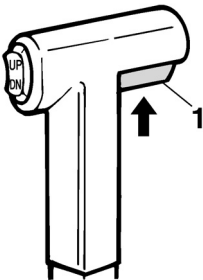

ZMU01727

1. Neutral interlock trigger

EMU26211


## Neutral throttle lever

To open the throttle without shifting into either forward or reverse, put the remote control lever in the neutral position and lift the neutral throttle lever.

### TIP:

The neutral throttle lever will operate only

when the remote control lever is in neutral. The remote control lever will operate only when the neutral throttle lever is in the closed position.

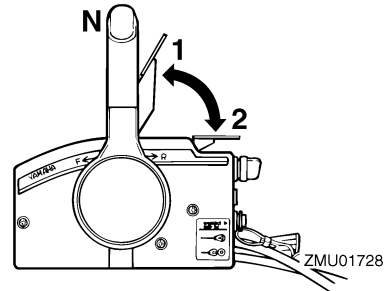


1. Fully open
2. Fully closed


EMU25911

## Tiller handle

To change direction, move the tiller handle to the left or right as necessary.

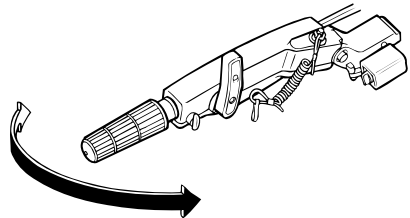

ZMU03348

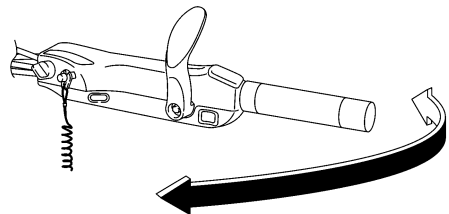


ZMU05203

# Components

EMU25922


## Gear shift lever

Pulling the gear shift lever towards you puts the engine in forward gear so that the boat moves ahead. Pushing the lever away from you puts the engine in reverse gear so that the boat moves astern.

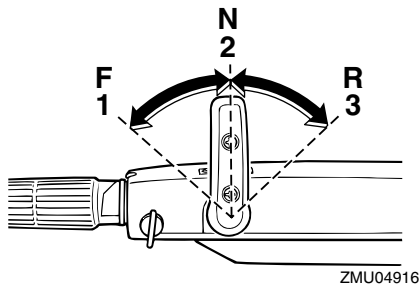

ZMU04916

1. Forward "F"
2. Neutral "N"
3. Reverse "R"

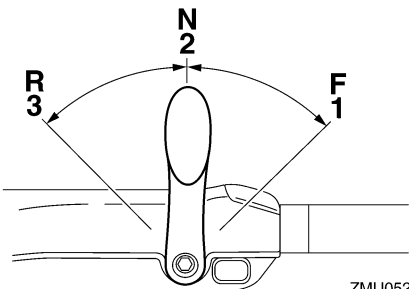


ZMU05204

1. Forward "F"
2. Neutral "N"
3. Reverse "R"


EMU25941

## Throttle grip

The throttle grip is on the tiller handle. Turn the grip counterclockwise to increase speed and clockwise to decrease speed.

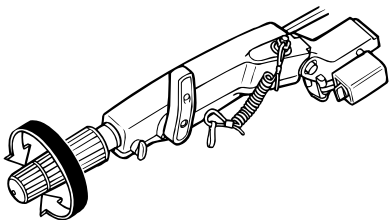

ZMU03350

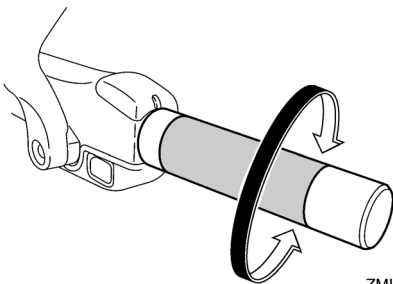


ZMU05205

EMU25961


## Throttle indicator

The fuel consumption curve on the throttle indicator shows the relative amount of fuel consumed for each throttle position. Choose the setting that offers the best performance and fuel economy for the desired operation.

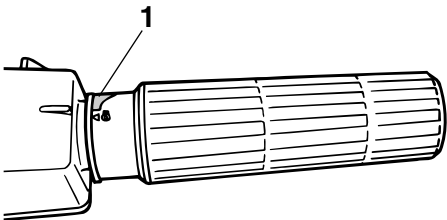

ZMU03351

1. Throttle indicator

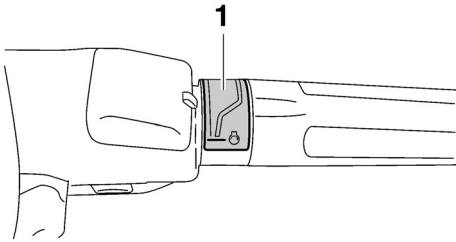

ZMU05206

## 1. Throttle indicator


EMU25973

### Throttle friction adjuster


A friction device provides adjustable resistance to movement of the throttle grip or the remote control lever, and can be set according to operator preference.

To increase resistance, turn the adjuster clockwise. **WARNING! Do not overtighten the friction adjuster. If there is too much resistance, it could be difficult to move the remote control lever or throttle grip, which could result in an accident.** [EWM00032]

To decrease resistance, turn the adjuster counterclockwise.

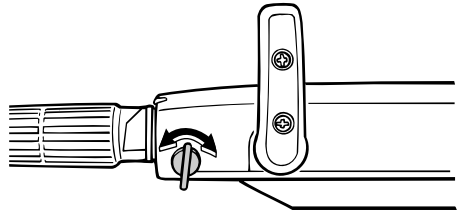

ZMU03352

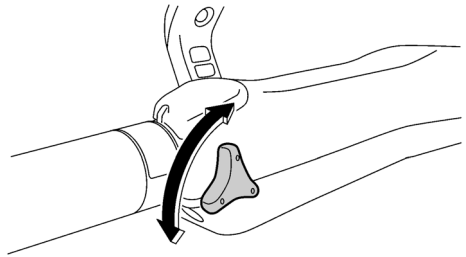


ZMU05207

When constant speed is desired, tighten the adjuster to maintain the desired throttle setting.

EMU25993

### Engine shut-off cord (lanyard) and clip


The clip must be attached to the engine shut-off switch for the engine to run. The cord should be attached to a secure place on the operator's clothing, or arm or leg. Should the operator fall overboard or leave the helm, the cord will pull out the clip, stopping ignition to the engine. This will prevent the boat from running away under power. **WARNING! Attach the engine shut-off cord to a secure place on your clothing, or your arm or leg while operating. Do not attach the cord to clothing that could tear loose. Do not route the cord where it could become entangled, preventing it from functioning. Avoid accidentally pulling the cord dur-**

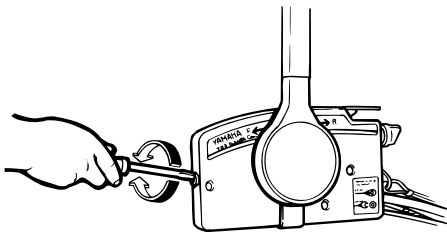


ZMU03095

# Components


ing normal operation. Loss of engine power means the loss of most steering control. Also, without engine power, the boat could slow rapidly. This could cause people and objects in the boat to be thrown forward. [EWM00122]

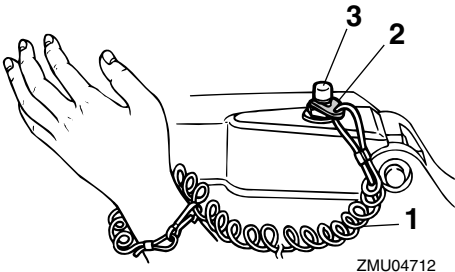

- 1. Cord
- 2. Clip
- 3. Engine shut-off switch

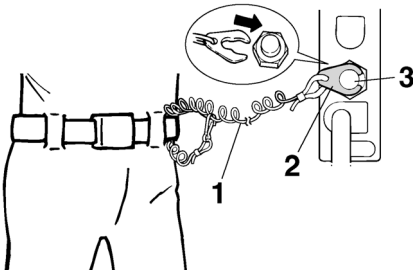

- 1. Cord
- 2. Clip
- 3. Engine shut-off switch


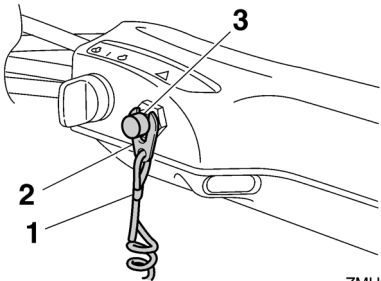


- 1. Cord
- 2. Clip
- 3. Engine shut-off switch

EMU26001

## Engine stop button

To open the ignition circuit and stop the engine, push this button.

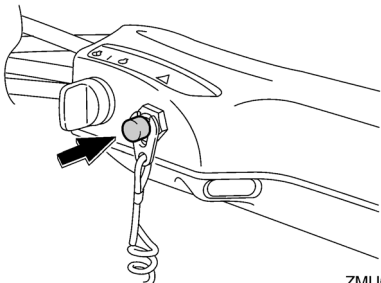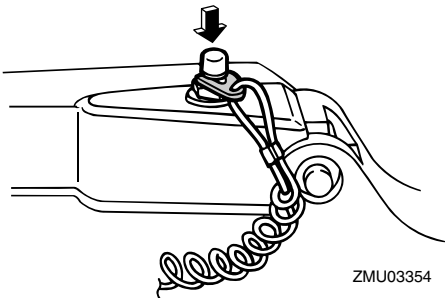


EMU26011

## Choke knob for pull type

To supply the engine with the rich fuel mix-


ture required to start, pull out this knob.

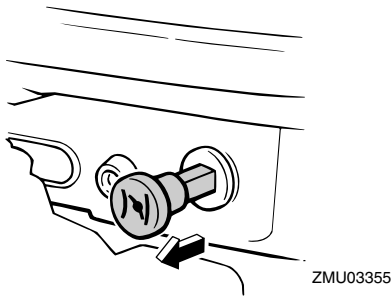

EMU26070

## Manual starter handle

To start the engine, first gently pull the handle out until resistance is felt. From that position, then pull the handle straight out quickly to crank the engine.

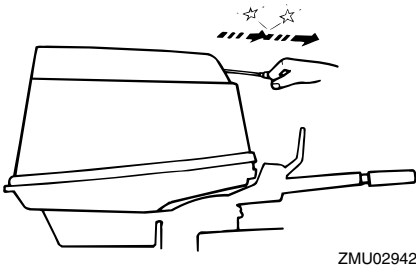

EMU26090

## Main switch

The main switch controls the ignition system; its operation is described below.

### ● “OFF” (off)

With the main switch in the “OFF” (off) position, the electrical circuits are off, and the key can be removed.



### ● “ON” (on)

With the main switch in the “ON” (on) position, the electrical circuits are on, and the key cannot be removed.

### ● “START” (start)

With the main switch in the “START” (start) po-

sition, the starter motor turns to start the engine. When the key is released, it returns automatically to the “ON” (on) position.

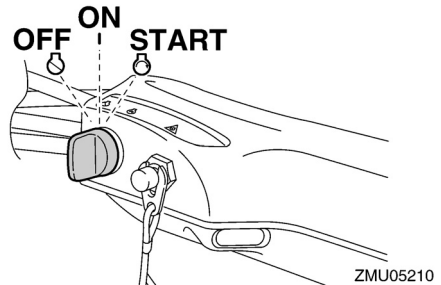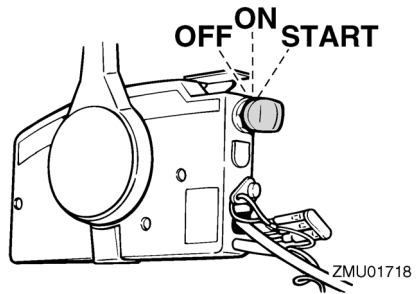

EMU26111

## Steering friction adjuster

A friction device provides adjustable resistance to the steering mechanism, and can be set according to operator preference. An adjuster lever is located on the bottom of the tiller handle bracket.

To increase resistance, turn the lever to the port side “A”.


To decrease resistance, turn the lever to the starboard side “B”.

EWMO0040

## ⚠ WARNING

**Do not overtighten the friction adjuster. If there is too much resistance, it could be difficult to steer, which could result in an accident.**

# Components

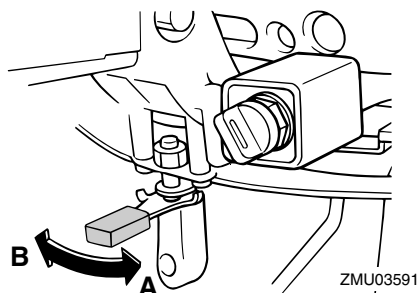


## TIP:

- Check the tiller handle for smooth movement when the lever is turned to the starboard side “B”.
- Do not apply lubricants such as grease to the friction areas of the steering friction adjuster.

EMU26122

## Steering friction adjuster

A friction device provides adjustable resistance to the steering mechanism, and can be set according to operator preference. An adjusting screw or bolt is located on the swivel bracket.

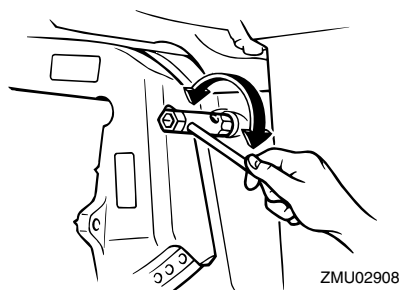

To increase resistance, turn the adjuster clockwise.

To decrease resistance, turn the adjuster counterclockwise.

EWMO0040



**WARNING**

**Do not overtighten the friction adjuster. If**



there is too much resistance, it could be difficult to steer, which could result in an accident.

EMU26143

## Power trim and tilt switch on remote control or tiller handle

The power trim and tilt system adjusts the outboard motor angle in relation to the transom. Pressing the switch “UP” (up) trims the outboard motor up, and then tilts it up. Pressing the switch “DN” (down) tilts the outboard motor down and trims it down. When the switch is released, the outboard motor will stop in its current position.

For instructions on using the power trim and tilt switch, see pages 55 and 59.

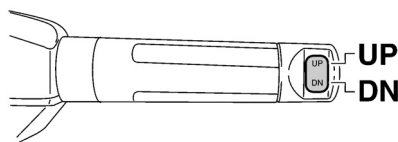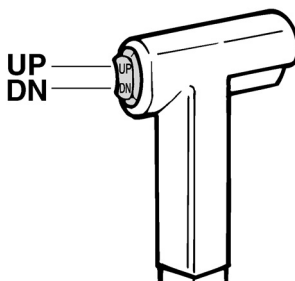

EMU26153

## Power trim and tilt switch on bottom engine cowling

The power trim and tilt switch is located on the side of the bottom engine cowling. Press-


ing the switch “UP” (up) trims the outboard motor up, and then tilts it up. Pressing the switch “DN” (down) tilts the outboard motor down and trims it down. When the switch is released, the outboard motor will stop in its current position.

For instructions on using the power trim and tilt switch, see page 59.

EWMO1030

## **! WARNING**

Use the power trim and tilt switch located on the bottom engine cowling only when the boat is at a complete stop with the engine off. Attempting to use this switch while the boat is moving could increase the risk of falling overboard and could distract the operator, increasing the risk of collision with another boat or an obstacle.

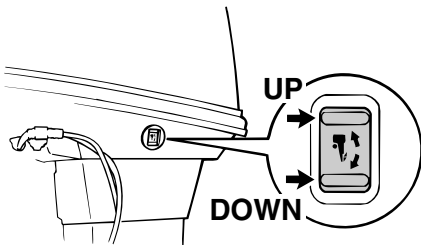

ZMU03096

EMU26244

## **Trim tab with anode**

EWMO0840

## **! WARNING**

An improperly adjusted trim tab could cause difficult steering. Always test run after the trim tab has been installed or replaced to be sure steering is correct. Be sure you have tightened the bolt after adjusting the trim tab.

The trim tab should be adjusted so that the


steering control can be turned to either the right or left by applying the same amount of force.

If the boat tends to veer to the left (port side), turn the trim tab rear end to the port side “A” in the figure. If the boat tends to veer to the right (starboard side), turn the trim tab end to the starboard side “B” in the figure.

ECMO0840

## **NOTICE**

The trim tab also serves as an anode to protect the engine from electrochemical corrosion. Never paint the trim tab as it will become ineffective as an anode.

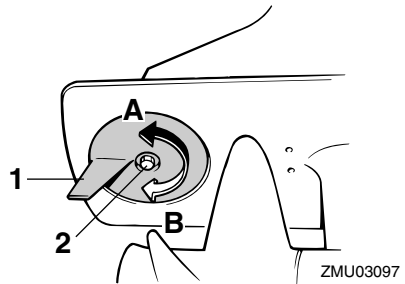

1. Trim tab
2. Bolt


Bolt tightening torque:  
18.0 Nm (1.8 kgf-m, 13 ft-lb)

EMU26261

## **Trim rod (tilt pin)**

The position of the trim rod determines the minimum trim angle of the outboard motor in relation to the transom.

# Components

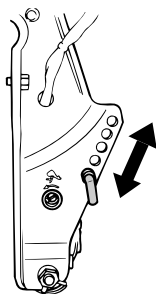


ZMU03357

EMU26312

## Tilt lock mechanism

The tilt lock mechanism is used to prevent the outboard motor from lifting out of the water when in reverse gear.

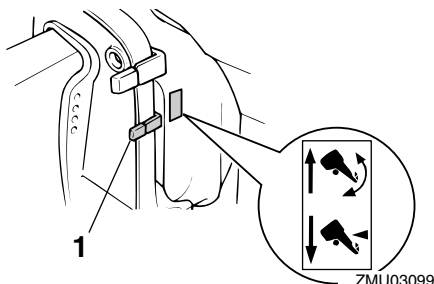

ZMU03099


### 1. Tilt lock lever

To lock it, set the tilt lock lever in the “” (lock) position. To release, push the tilt lock lever in the “” (release) position.

EMU26341

## Tilt support lever for power trim and tilt model

To keep the outboard motor in the tilted up position, lock the tilt support lever to the clamp bracket.

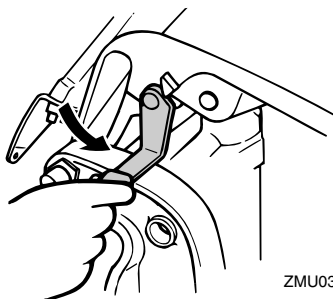

ZMU03194

ECM00660


## NOTICE

**Do not use the tilt support lever or knob when trailering the boat. The outboard motor could shake loose from the tilt support and fall. If the motor cannot be trailered in the normal running position, use an additional support device to secure it in the tilt position.**

EMU30201

## Tilt support lever for manual tilt model

To keep the outboard motor in the tilted up position, lock the tilt support lever to the clamp bracket.

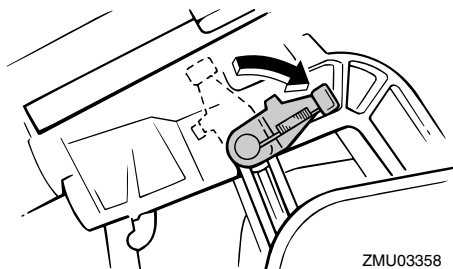

ZMU03358

ECM00660

## NOTICE

**Do not use the tilt support lever or knob when trailering the boat. The outboard motor could shake loose from the tilt sup-**




port and fall. If the motor cannot be trailered in the normal running position, use an additional support device to secure it in the tilt position.


EMU26372

## Top cowling lock lever(s) (turn type)

To remove the engine top cowling, turn the lock lever(s) and lift off the cowling. When installing the cowling, check to be sure it fits properly in the rubber seal. Then lock the cowling again by returning the lever(s) to the lock position.

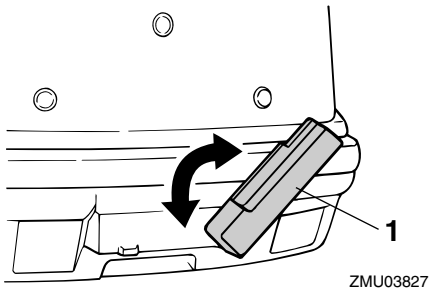

1. Top cowling lock lever(s)

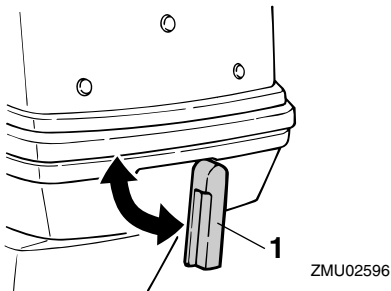


1. Top cowling lock lever(s)

EMU26303

## Alert indicator

If the engine develops a condition which is cause for alert, the indicator lights up. For details on how to read the alert indicator, see

page 32.

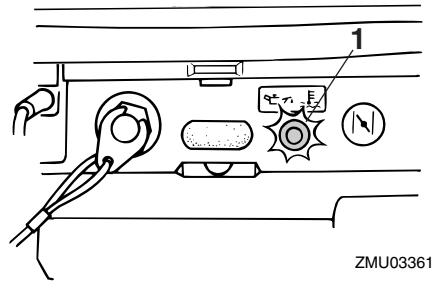

1. Alert indicator

# Instruments and indicators


EMU36013

## Indicators

EMU26291

### Alert indicator for three indicators

If the engine develops a condition which is cause for alert, the indicator on the front of the bottom cowling lights up. The three indicators mounted on the bottom cowling also indicate the engine oil level. For details on how to read the alert indicators, see page 32.

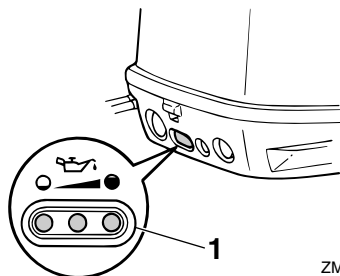

ZMU03360

1. Alert indicator(s)

EMU36032


### Overheat-alert indicator

If the engine temperature rises too high, this indicator will light up. For further information on reading the indicator, see page 32.

ECM00052

### NOTICE

**Do not continue to run the engine if the overheat-alert indicator is on. Serious engine damage will occur.**

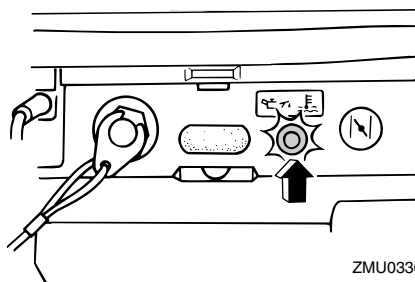


ZMU03364

EMU26493

## Digital tachometer

The tachometer shows the engine speed and has the following functions.

All segments of the display will light momentarily after the main switch is turned on and will return to normal thereafter.

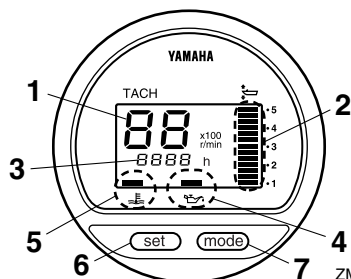

ZMU03601

1. Tachometer
2. Trim meter
3. Hour meter
4. Oil level indicator
5. Overheat-alert indicator
6. Set button
7. Mode button

### TIP:

The water separator and engine trouble-alert indicators only operate when the engine is equipped with the appropriate functions.


# Instruments and indicators

EMU26621

## Trim meter

This meter shows the trim angle of your out-board motor.


- Memorize the trim angles that work best for your boat under different conditions. Adjust the trim angle to the desired using the power trim and tilt switch.
- If the trim angle of your motor exceeds the trim operating range, the top segment on the trim meter display will blink.

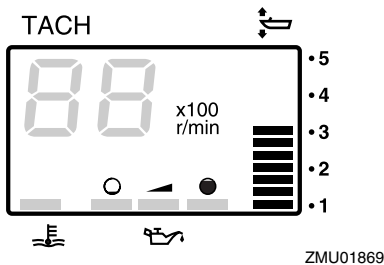

EMU26651

## Hour meter

This meter shows the number of hours the engine has been run. It can be set to show the total number of hours or the number of hours for the current trip. The display can also be turned on and off.

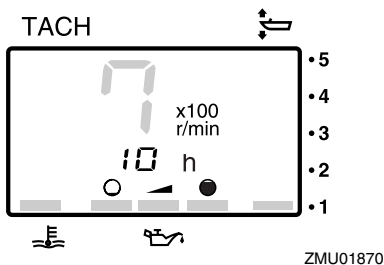

To change the display format, press the "mode" (mode) button. The display can show total hours or trip hours, or turn off.

To reset the trip hours, simultaneously press the "set" (set) and "mode" (mode) buttons for more than 1 second while the trip hours are displayed. This resets the trip counter to 0 (zero).

The total number of hours the engine has been run cannot be reset.

EMU26551


## Oil level indicator (digital type)

This indicator shows the engine oil level. If the oil level falls below the lower limit, the alert indicator will start to blink. For further information, see page 33.

ECM00030

### NOTICE

**Do not operate the engine without oil. Serious engine damage will occur.**

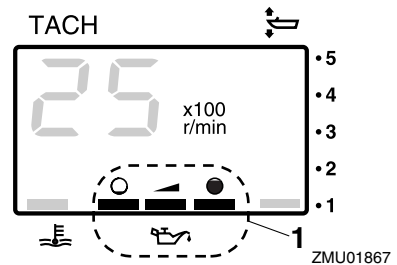

1. Oil level indicator

EMU26583

## Overheat-alert indicator


If the engine temperature rises too high, the alert indicator will start to blink. For further information on reading the indicator, see page 32.

ECM00052

### NOTICE

**Do not continue to run the engine if the overheat-alert indicator is on. Serious engine damage will occur.**

# Instruments and indicators

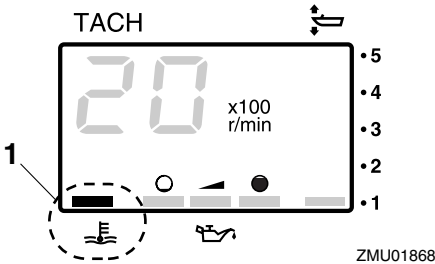


1. Overheat-alert indicator

EMU26471

## Analog tachometer

This gauge shows the engine speed and has the following functions.

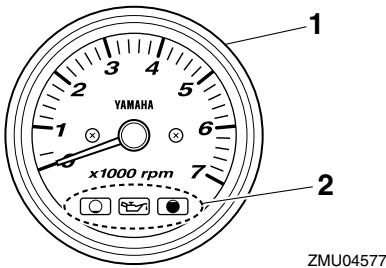

- 1. Tachometer
- 2. Oil level indicator

EMU26541


## Oil level indicators (three indicators 2)

The indicators on the gauge show the status of the oil level. For details on how to read the indicators, see page 45.

ECM00030

**NOTICE**

**Do not operate the engine without oil. Serious engine damage will occur.**

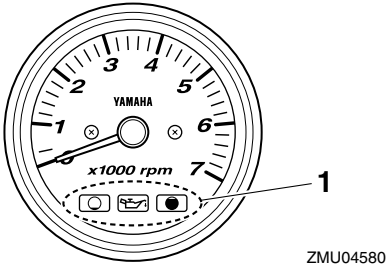

1. Oil level indicators

EMU26574


## Overheat-alert indicator

If the engine temperature rises too high, this indicator will flash. For further information on reading the indicator, see page 32.

ECM00052

**NOTICE**

**Do not continue to run the engine if the overheat-alert indicator is on. Serious engine damage will occur.**

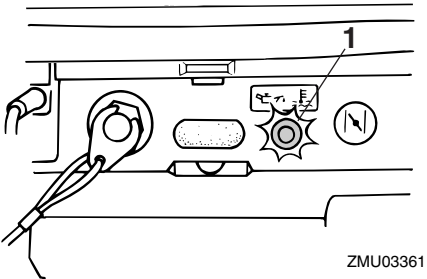


1. Overheat-alert indicator

EMU26611

## Analog trim meter

This gauge shows the trim angle of your out-board motor.

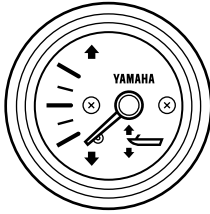

ZMU04581

Memorize the trim angles that work best for your boat under different conditions. Adjust the trim angle to the desired setting with the power trim and tilt switch.

# Engine control system

EMU26803

## Alert system

ECM00091

### NOTICE


Do not continue to operate the engine if a alert device has activated. Consult your Yamaha dealer if the problem cannot be located and corrected.

EMU2681A

### Overheat alert


This engine has an overheat-alert device. If the engine temperature rises too high, the alert device will activate.

- The engine speed will automatically decrease to about 2000 r/min.

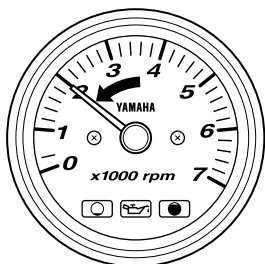


ZMU04766

- The overheat-alert indicator will light or blink.

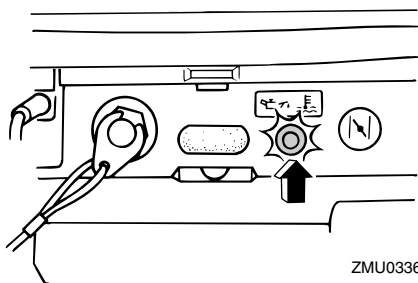


ZMU03364

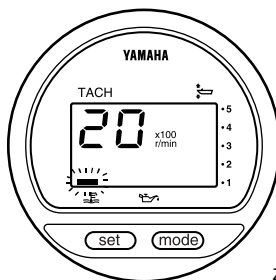

ZMU01757


- The buzzer will sound (if equipped on the tiller handle, remote control box, or main switch panel).

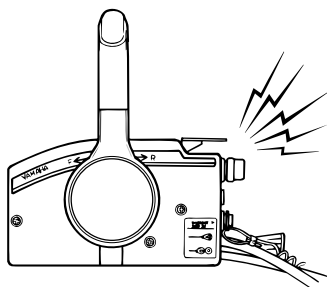

ZMU03025

If the alert system has activated, stop the engine and check the cooling water inlets:

- Check trim angle to be sure that the cooling water inlet is submerged.
- Check the cooling water inlet for clogging.

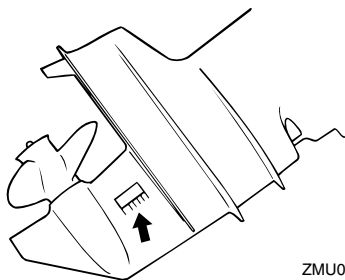

ZMU03026

# Engine control system

EMU26848


## Oil level alert and oil filter clogging alert

### Oil injection models


This engine has an oil level alert system. If the oil level falls below the lower limit, the alert system will activate.

### Activation of alert device


- Engine speed will automatically decrease to about 2000 r/min.

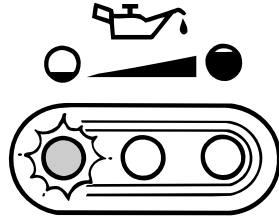

ZMU03363

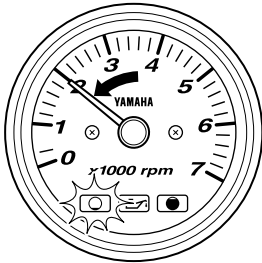


ZMU04586

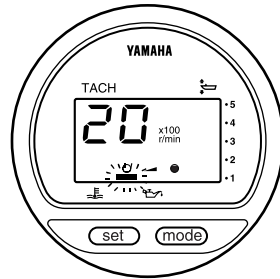


ZMU03942

- The oil level-alert indicator will light or blink.
- The buzzer will sound (if equipped on the tiller handle, remote control box, or main switch panel).

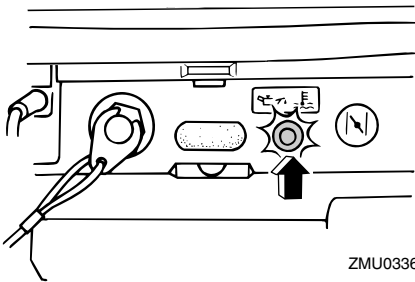

ZMU03364

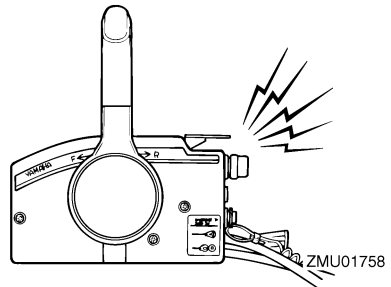

ZMU01758


If the alert system has been activated, stop the engine and check for the cause.

### TIP:

The alert for oil filter clogging is similar to the alerts for low oil level and overheating. To make troubleshooting easier, check for engine overheating first, then oil level, and finally oil filter clogging.

# Engine control system

---

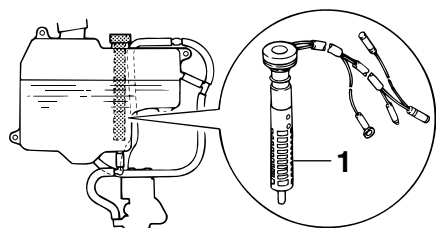

ZMU03366

1. Oil filter



EMU26902

## Installation

The information presented in this section is intended as reference only. It is not possible to provide complete instructions for every possible boat and motor combination. Proper mounting depends in part on experience and the specific boat and motor combination.

EWMO1590




### WARNING

- **Overpowering a boat could cause severe instability. Do not install an outboard motor with more horsepower than the maximum rating on the capacity plate of the boat. If the boat does not have a capacity plate, consult the boat manufacturer.**
- **Improper mounting of the outboard motor could result in hazardous conditions such as poor handling, loss of control, or fire hazards. For permanently mounted models, your dealer or other person experienced in proper rigging should mount the motor.**

EMU33470

### Mounting the outboard motor

The outboard motor should be mounted so that the boat is well balanced. Otherwise, the boat could be hard to steer. For single-engine boats, mount the outboard motor on the centerline (keel line) of the boat.

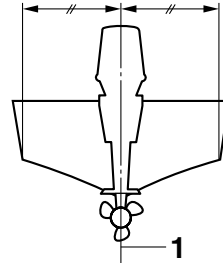

ZMU01760

1. Center line (keel line)


EMU26931

### Mounting height (boat bottom)

The mounting height of your outboard motor affects its efficiency and reliability. If it is mounted too high, propeller ventilation may occur, which will reduce propulsion due to excessive propeller slip, and the water intakes for the cooling system may not get adequate water supply, which can cause engine overheating. If the engine is mounted too low, water resistance (drag) will increase, thereby reducing engine efficiency and performance.

Most commonly, outboard motor should be mounted so that the anti-cavitation plate is in alignment with the bottom of the boat. The optimum mounting height of the outboard motor is affected by the boat/motor combination and the desired use. Test runs at different heights can help determine the optimum mounting height. Consult your Yamaha dealer or boat manufacturer for further information on determining the proper mounting height.

# Installation

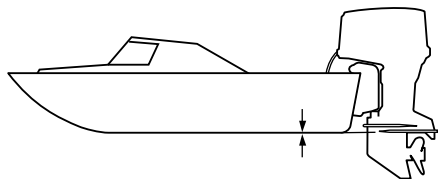

ZMU01762

ECM01630

## NOTICE


- During water testing, check the buoyancy of the boat, at rest, with its maximum load. Check that the static water level on the exhaust housing is low enough to prevent water entry into the power head when water rises due to waves when the outboard is not running.
- Incorrect engine height or obstructions to the smooth flow of water (such as the design or condition of the boat, or accessories such as transom ladders or depth finder transducers) can create airborne water spray while the boat is cruising. If the motor is operated continuously in the presence of airborne water spray, enough water could enter the engine through the intake opening on the cowling to cause severe engine damage. Eliminate the cause of the airborne water spray.

EMU26971

## Clamping the outboard motor


1. Place the outboard motor on the transom so that it is positioned as close to the center as possible. Tighten the transom clamp screws evenly and securely. Occasionally check the clamp screws for tightness during operation of the out-

board motor because they could become loose due to engine vibration. **WARNING! Loose clamp screws could allow the outboard motor to fall off or move on the transom. This could cause loss of control and serious injury. Make sure the transom screws are tightened securely. Occasionally check the screws for tightness during operation.** [EWM00641]

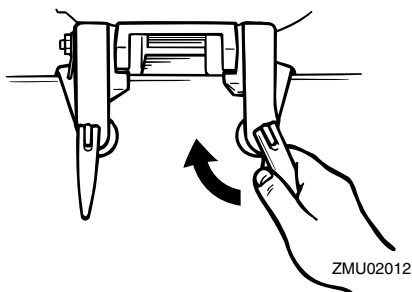

ZMU02012

2. If the engine restraint cable attachment is equipped on your engine, an engine restraint cable or chain should be used. Attach one end to the engine restraint cable attachment and the other to a secure mounting point on the boat. Otherwise the engine could be completely lost if it accidentally falls off the transom.

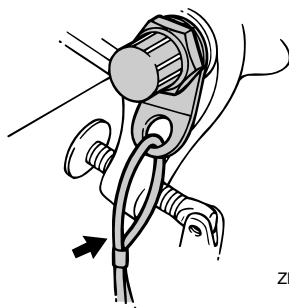


ZMU02013

3. Secure the clamp bracket to the transom using the bolts provided with the outboard (if packed). For details, consult

your Yamaha dealer. **WARNING! Avoid using bolts, nuts or washers other than those contained in the engine packaging. If used, they must be of at least the same quality of material and strength and must be tightened securely. After tightening, test run the engine and check their tightness.**

[EWM00651]

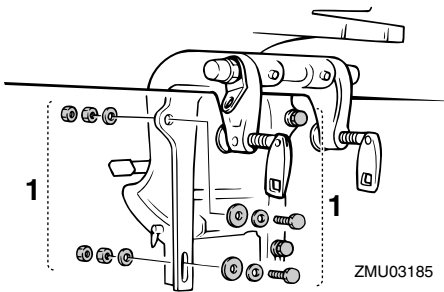

1. Bolts

# Operation

EMU36380

## First-time operation

EMU27020

### Breaking in engine

Your new engine requires a period of break-in to allow mating surfaces of moving parts to wear in evenly. Correct break-in will help ensure proper performance and longer engine life.

ECM00140

### NOTICE

- Failure to follow the break-in procedure could result in reduced engine life or even severe engine damage.
- Premix fuel must be used during break-in in addition to oil in the oil injection system.

EMU27060

### Gasoline and engine oil mixing chart (50:1)

|                                                                                  | 50:1                                  |                                        |                                      |                                       |
|----------------------------------------------------------------------------------|---------------------------------------|----------------------------------------|--------------------------------------|---------------------------------------|
|  | 1 L<br>(0.26 US gal,<br>0.22 Imp gal) | 12 L<br>(3.2 US gal,<br>2.6 Imp gal)   | 14 L<br>(3.7 US gal,<br>3.1 Imp gal) | 24 L<br>(6.3 US gal,<br>5.3 Imp gal)  |
|  | 0.02L<br>(0.02 US qt,<br>0.02 Imp qt) | 0.24 L<br>(0.25 US qt,<br>0.21 Imp qt) | 0.28 L<br>(0.3US qt,<br>0.25 Imp qt) | 0.48 L<br>(0.51 US qt,<br>0.42Imp qt) |

ZMU02442

1. : Gasoline

2. : Engine oil

ECM00150

### NOTICE

Be sure to mix gasoline and oil completely, otherwise the engine may be damaged.

EMU30311

### Procedure for oil injection models

Run the engine under load (in gear with a propeller installed) for 10 hours as follows.

1. First 10 minutes:

Run the engine at the lowest possible speed. A fast idle in neutral is best.

2. Next 50 minutes:

Do not exceed half throttle (approximately 3000 r/min). Vary engine speed occasionally. If you have an easy-planing boat, accelerate at full throttle onto plane, then immediately reduce the throttle to 3000 r/min or less.

3. Next two hours:

Accelerate at full throttle onto plane, then reduce engine speed to three-quarter throttle (approximately 4000 r/min). Vary engine speed occasionally. Run at full throttle for one minute, then allow about 10 minutes of operation at three-quarter throttle or less to let the engine cool.

4. Remaining seven hours:

Run the engine at any speed. However, avoid operating at full throttle for more than 5 minutes at a time.

5. After the first 10 hours:

Operate the engine normally. Use only straight gasoline in the fuel tank. The Yamaha oil injection system provides proper lubrication for normal operation.

EMU36400

### Getting to know your boat

Different boats handle differently. Operate cautiously while you learn how your boat handles under different conditions and with different trim angles (see page 55).

EWMO1920

### Checks before starting engine

EWMO1920

### WARNING

If any item in the checks before starting engine is not working properly, have it inspected and repaired before operating the outboard motor. Otherwise an acci-

dent could occur.

ECM00120

## NOTICE

**Do not start the engine out of water. Overheating and serious engine damage can occur.**

EMU37150


## Fuel level

Be sure you have plenty of fuel for your trip. A good rule is to use 1/3 of your fuel to get to the destination, 1/3 to return, and to keep 1/3 as an emergency reserve. With the boat level on a trailer or in the water, turn the key to "ON"(on) and check the fuel level. For fuel filling instructions, see page 42.

EMU36431

## Remove cowling

For the following checks, remove the top cowling from the engine. To remove the engine cowling, release all the lock levers and lift off the cowling.

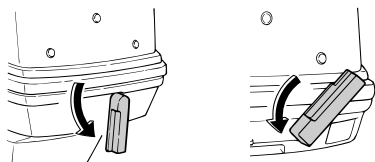

ZMU06093

EMU36440

## Fuel system

EWMM00060

## WARNING

**Gasoline and its vapors are highly flammable and explosive. Keep away from sparks, cigarettes, flames, or other**

**sources of ignition.**

EWMM00910

## WARNING

**Leaking fuel can result in fire or explosion.**

- Check for fuel leakage regularly.
- If any fuel leakage is found, the fuel system must be repaired by a qualified mechanic. Improper repairs can make the outboard unsafe to operate.

EMU36450


## Check for fuel leaks

- Check under top cowling and in the boat for fuel leaks or gasoline fumes.
- Check fuel line connections to be sure they are tight.
- Check fuel lines for cracks, swelling, or other damage.

EMU37320

## Check the fuel filter

Check that the fuel filter is clean and free of water. If any water is found in the fuel, or if a significant amount of debris is found, the fuel tank should be checked and cleaned by a Yamaha dealer.

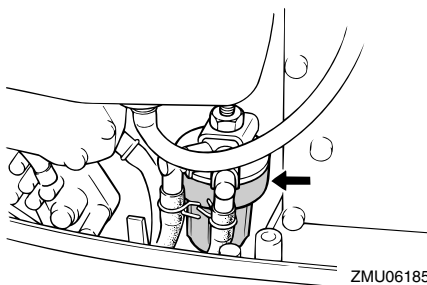

ZMU06185

EMU36900

## Controls

Tiller handle models:

- Turn the tiller handle fully to the left and right to make sure operation is smooth.
- Turn the throttle grip from the fully closed

# Operation

to the fully open position. Make sure that it turns smoothly and that it completely returns to the fully closed position.

- Look for loose or damaged connections of the throttle and shift cables under the engine cowling.


Remote control models:

- Turn the steering wheel full-right and full-left. Make sure operation is smooth and unrestricted throughout the whole range with no binding or excessive free play.
- Operate the throttle levers several times to make sure there is no hesitation in their travel. Operation should be smooth over the complete range of motion, and each lever should return completely to the idle position.
- Look for loose or damaged connections of the throttle and shift cables under the engine cowling.

EMU36481


## Engine shut-off cord (lanyard)

Inspect the engine shut-off cord for damage, such as cuts, breaks, and wear.

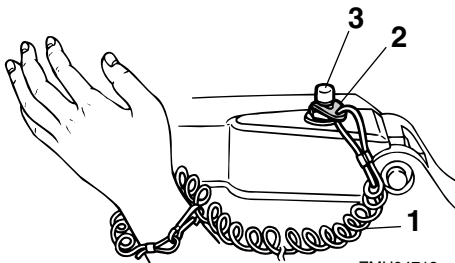


ZMU04712

1. Cord
2. Clip
3. Engine shut-off switch

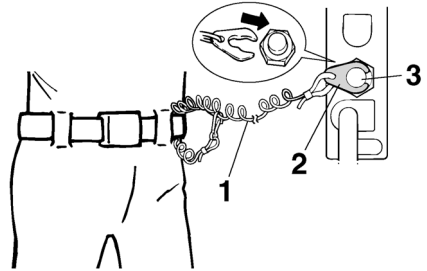

ZMU01716

1. Cord
2. Clip
3. Engine shut-off switch

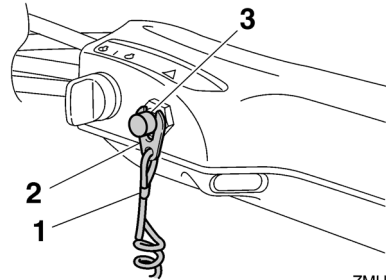

ZMU05208

1. Cord
2. Clip
3. Engine shut-off switch

EMU27120

## Oil

- Check to be sure you have plenty of oil for your trip.

EMU27151

## Engine

- Check the engine and engine mounting.
- Look for loose or damaged fasteners.
- Check the propeller for damage.
- Check for oil leaks.

EMU27180

## Operation after long period of storage

### Oil injection models

When operating the engine after a long period (12 months) of storage, proceed as follows:


1. Use a 50:1 gasoline to oil mixture to start the engine.
2. Start the engine. Leave it idling.

ECM01330

### **WARNING**

- Do not touch or remove electrical parts when starting or during operation.
- Keep hands, hair, and clothes away from the flywheel and other rotating parts while the engine is running.

3. Watch for oil flowing through the oil feed pipes. After any air in the oil lines has been expelled, the oil injection system should supply oil normally. If no oil is flowing after 10 minutes of idling, consult your Yamaha dealer.

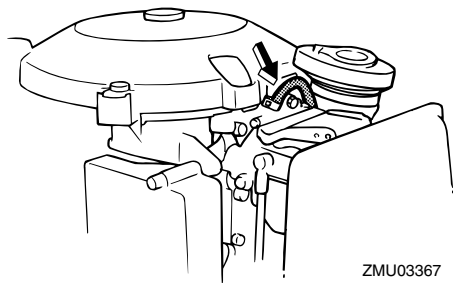

ECM01260


### **NOTICE**

Be sure to take the above steps when operating the engine after a long period of storage. Otherwise engine seizure could occur.


EMU36961

## Install cowling

1. Be sure that all cowling lock levers are released.
2. Be sure that the rubber seal is seated all the way around the engine.
3. Place the cowling on top of the seal.
4. Check to be sure the rubber seal fits correctly all the way around the engine.
5. Move the levers to lock the cowling as shown. **NOTICE: If the cowling is not installed correctly, water spray under the cowling can damage the engine, or the cowling can blow off at high speeds.** [ECM01990]

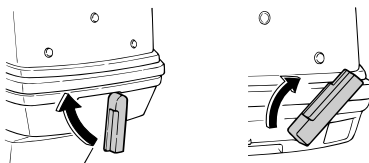

After installing, check the fitting of the top cowling by pushing it with both hands. If the top cowling is loose, have it repaired by your Yamaha dealer.

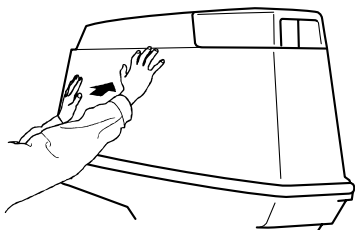

# Operation

EMU34581


## Power trim and tilt system

EWM01930

### **WARNING**

- **Never get under the lower unit while it is tilted, even when the tilt support lever is locked. Severe injury could occur if the outboard motor accidentally falls.**
- **Body parts can be crushed between the motor and the clamp bracket when the motor is trimmed or tilted.**
- **Be sure no one is near the outboard motor before performing this check.**

1. Check the power trim and tilt unit for any sign of oil leaks.

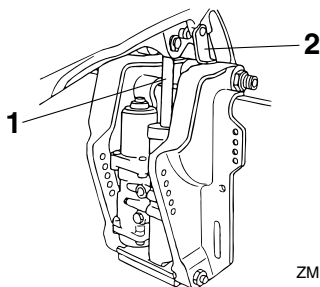

1. Trim and tilt rod
  2. Tilt support lever
2. Operate each of the power trim and tilt switches to check that all switches work.
  3. Tilt the outboard motor up and check that the trim and tilt rod is pushed out completely.
  4. Check that the trim and tilt rod is free of corrosion or other flaws.
  5. Tilt the outboard motor down. Check that the trim and tilt rod operates smoothly.

EMU36581

## Battery

Check that the battery is in good condition,

and fully charged. Check that the battery connections are clean, secure and covered by insulating covers. The electrical contacts of the battery and cables must be clean and properly connected or the battery will not start the engine.

Refer to the battery manufacturer's instructions for checks for your particular battery.

EMU27234

## Filling fuel and engine oil

EMU27246

### Filling fuel for portable tank

EWM01830

### **WARNING**

- **Gasoline and its vapors are highly flammable and explosive. Always refuel according to this procedure to reduce the risk of fire and explosion.**
- **Gasoline is poisonous and can cause injury or death. Handle gasoline with care. Never siphon gasoline by mouth. If you should swallow some gasoline or inhale a lot of gasoline vapor, or get some gasoline in your eyes, see your doctor immediately. If gasoline spills on your skin, wash with soap and water. If gasoline spills on your clothing, change your clothes.**

1. Stop the engine.
2. Remove the portable tank from the boat.
3. Be sure you are in a well-ventilated outdoor area, either securely moored or trailered.
4. Do not smoke and keep away from sparks, flames, static electric discharge, or other sources of ignition.
5. If you use a portable container to store and dispense fuel, use only an approved GASOLINE container.
6. Touch the fuel nozzle to the filler opening or funnel to help prevent electrostatic




sparks.

7. Fill the fuel tank, but do not overfill. Fuel can expand and overflow if the temperature increases.

Fuel tank capacity:

24 L (6.34 US gal, 5.28 Imp.gal),  
25 L (6.60 US gal, 5.50 Imp.gal)

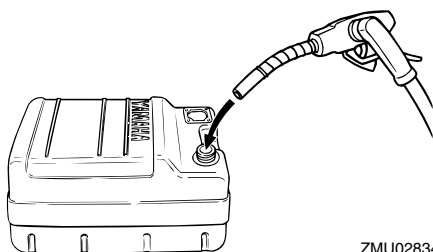

ZMU02834

8. Tighten the filler cap securely.
9. Wipe up any spilled gasoline immediately with dry rags. Dispose rags properly. According to local laws or regulations.

EMU27301

## Filling oil for manual starter model

EWM00530



**Do not add gasoline into the oil tank. Fire or explosion could result.**


This engine uses the Yamaha oil injection system, which provides superior lubrication by ensuring the proper oil ratio for all operating conditions. No fuel premixing is needed. Simply pour gasoline into the fuel tank and oil into the oil tank. Convenient indicator segments indicate the status of the oil supply. For details on reading the indicator segments, see page 45.

To fill the engine oil tank, proceed as follows:

Engine oil tank capacity:

1.5 L (1.59 US qt, 1.32 Imp.qt)

1. Remove the top cowling.
2. Open the oil tank filler cap by pulling the tab.
3. Slowly fill the engine oil into the engine oil tank.

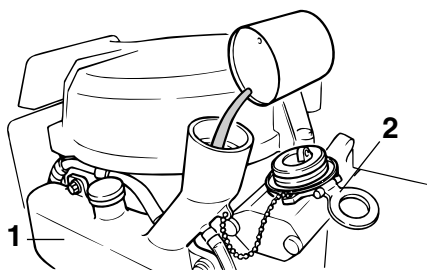

ZMU03368

1. Engine oil tank
2. Oil tank filler cap

4. After filling, replace the cap securely.

EMU27311

## Filling oil for electric start models

EWM00530



**Do not add gasoline into the oil tank. Fire or explosion could result.**


This engine uses the Yamaha oil injection system, which provides superior lubrication by ensuring the proper oil ratio for all operating conditions. No fuel premixing is needed. Simply pour gasoline into the fuel tank and oil into the oil tank. Convenient indicator segments indicate the status of the oil supply. For details on reading the indicator segments, see page 45.

# Operation

To fill the engine oil tank, proceed as follows:


Engine oil tank capacity:  
1.5 L (1.59 US qt, 1.32 Imp.qt)

1. Turn the oil filler access cap on the top cowlings counterclockwise and open it.

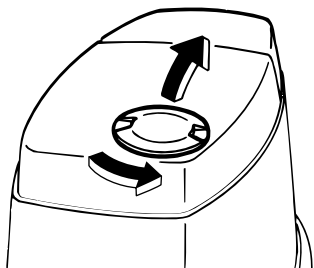


ZMU03369

2. Open the oil tank filler cap by pulling the tab on the cap.

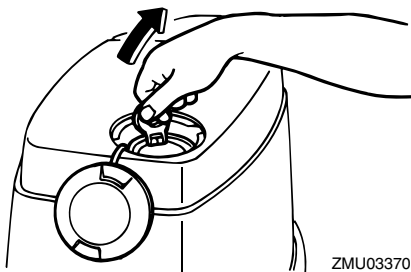

ZMU03370

3. Slowly pour the engine oil into the engine oil tank.

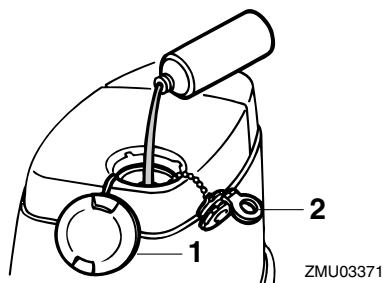

ZMU03371

1. Oil filler access cap
2. Oil tank filler cap

4. After filling, replace the all caps securely.



EMU27321

**Oil level indicator operation**

The various functions of the oil level system are as follows:



EMU27342

  Manual start models

| Oil level-alert indicator |                                                                                                                                                                            |                                                                                   | Engine oil tank                                                                                                                                        | Remarks                                                                                                                                                                                                                              |
|---------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| OFF                       |          |  | <br>more than<br>200 cm <sup>3</sup><br>(0.21 US qt,<br>0.181 Imp qt) | No refilling necessary.                                                                                                                                                                                                              |
| ON                        | Red<br>  |  | <br>200 cm <sup>3</sup><br>(0.21 US qt,<br>0.181 Imp qt)<br>or less   | <ul style="list-style-type: none"><li>● Buzzer sounds in remote control box and engine speed is limited to about 2000 r/min to help conserve oil.</li><li>● Check oil filter for clogging.</li><li>● Add oil; see page 43.</li></ul> |

# Operation
  
## Electric start models

| Oil level-alert indicator (digital tachometer)                                   | Oil level-alert indicator (analog tachometer/ bottom cowling)                               | Engine oil tank                                                                                                                                                                               | Remarks                                                                                                                                                                                              |
|----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Green<br>  | <br>more than 450 cm <sup>3</sup> (0.48 US qt, 0.40 Imp qt)                                                  | No refilling necessary.                                                                                                                                                                              |
|  | Yellow<br> | <br>from 450 cm <sup>3</sup> (0.48 US qt, 0.40 Imp qt) down to 200 cm <sup>3</sup> (0.21 US qt, 0.18 Imp qt) | Add oil; see page 43.                                                                                                                                                                                |
|  | Red<br>    | <br>200 cm <sup>3</sup> (0.21 US qt, 0.18 Imp qt) or less                                                    | <ul style="list-style-type: none"><li>● Buzzer sounds in remote control box and engine speed is limited to about 2000 r/min to help conserve oil.</li><li>● Check oil filter for clogging.</li></ul> |

EMU27451

## Operating engine

EMU27464

### Feeding fuel (portable tank)

EWM00420




#### WARNING

- Before starting the engine, make sure that the boat is tightly moored and that you can steer clear of any obstructions. Be sure there are no swimmers in the water near you.
- When the air vent screw is loosened, gasoline vapor will be released. Gasoline is highly flammable, and its vapors are flammable and explosive. Refrain from smoking, and keep away from open flames and sparks while loosening the air vent screw.

ing the air vent screw.


- This product emits exhaust gases which contain carbon monoxide, a colorless, odorless gas which could cause brain damage or death when inhaled. Symptoms include nausea, dizziness, and drowsiness. Keep cockpit and cabin areas well ventilated. Avoid blocking exhaust outlets.

1. If there is an air vent screw on the fuel tank cap, loosen it 2 or 3 turns.

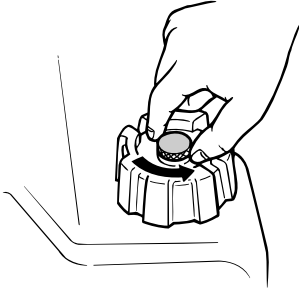

ZMU02295

2. If there is a fuel joint on the motor, firmly connect the fuel line to the joint. Then firmly connect the other end of the fuel line to the joint on the fuel tank.

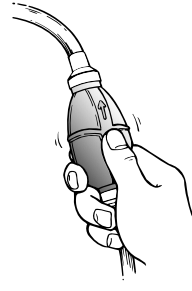

ZMU02025

1. Arrow

EMU27492

## Starting engine

EWMO1600



### WARNING

Before starting the engine, make sure that the boat is tightly moored and that you can steer clear of any obstructions. Be sure there are no swimmers in the water near you.

EMU27508


## Manual start models (tiller control)

EWMO1840




### WARNING

- Failure to attached engine shut-off cord could result in a runaway boat if operator is ejected. Attach the engine shut-off cord to a secure place on your clothing, or your arm or leg while operating. Do not attach the cord to clothing that could tear loose. Do not route the cord where it could become entangled, preventing it from functioning.
- Avoid accidentally pulling the cord during normal operation. Loss of engine power means the loss of most steering control. Also, without engine power, the boat could slow rapidly. This could cause people and objects in the boat to be thrown forward.

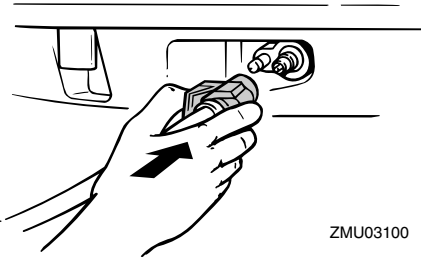

ZMU03100

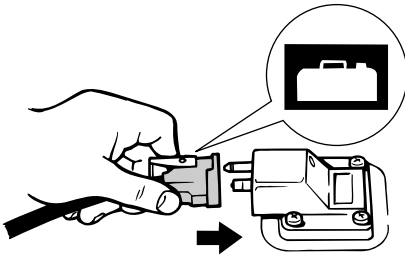


ZMU02024

3. Squeeze the primer pump, with the arrow pointing up, until you feel it become firm. During engine operation place the tank horizontally, otherwise fuel cannot be drawn from the fuel tank.

# Operation

1. Place the gear shift lever in neutral.

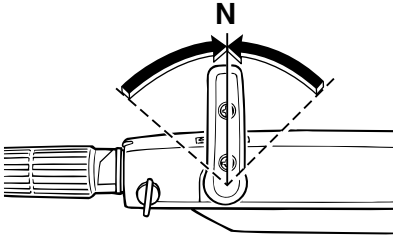


ZMU03386

## TIP:


The start-in-gear protection device prevents the engine from starting except when in neutral.

2. Attach the engine shut-off cord to a secure place on your clothing, or your arm or leg. Then install the clip on the other end of the cord into the engine shut-off switch.

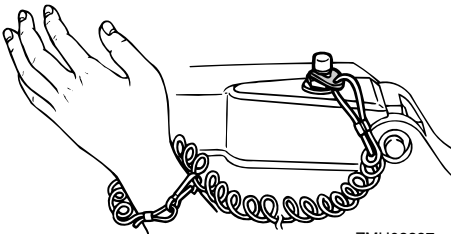


ZMU03387

3. Place the throttle grip in the "START" (start) position.

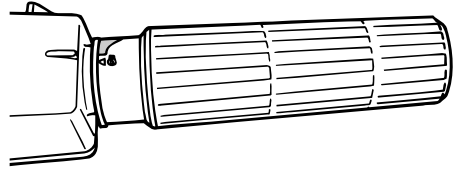

ZMU03388


4. Pull out / turn the choke knob fully. After the engine starts, replace / return the knob to the home position.

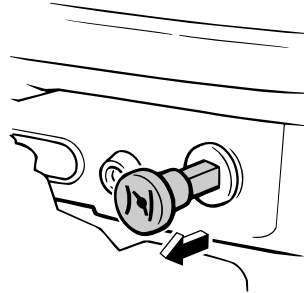

ZMU03389


## TIP:

- It is not necessary to use the choke when starting a warm engine.
  - If the choke knob is left in the "START" (start) position while the engine is running, the engine will run poorly or stall.
5. Pull the manual starter handle slowly until you feel resistance. Then give a strong pull straight out to crank and start the engine. Repeat if necessary.

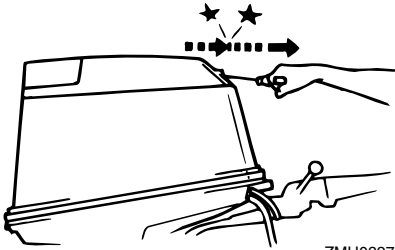

ZMU03279

6. After the engine starts, slowly return the manual starter handle to its original position before releasing it.
7. Slowly return the throttle grip to the fully closed position.

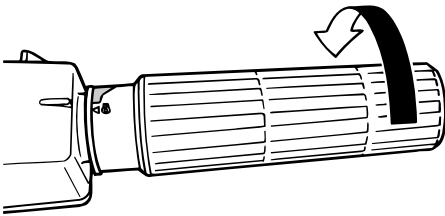

ZMU03390

## TIP:

- When the engine is cold, it needs to be warmed up. For further information, see page 52.
- If the engine does not start on the first try, repeat the procedure. If the engine fails to start after 4 or 5 tries, open the throttle a small amount (between 1/8 and 1/4) and try again. Also if the engine is warm and fails to start, open the throttle a same amount and try to start the engine again. If the engine still fails to start, see page 84.

EMU27595


## Electric start / prime start models

EWMO1840

### **WARNING**

- Failure to attached engine shut-off cord could result in a runaway boat if operator is ejected. Attach the engine shut-off cord to a secure place on your clothing, or your arm or leg while operating. Do not attach the cord to clothing that could tear loose. Do not route the cord where it could become entangled, preventing it from functioning.
- Avoid accidentally pulling the cord during normal operation. Loss of engine power means the loss of most steering control. Also, without engine power, the boat could slow rapidly. This could cause people and objects in the boat to be thrown forward.

1. Place the gear shift lever in neutral.

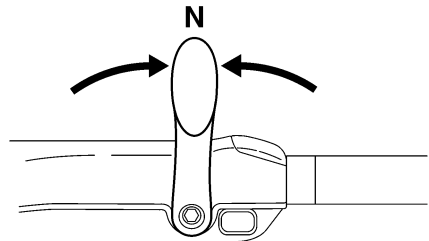


ZMU05215

## TIP:

The start-in-gear protection device prevents the engine from starting except when in neutral.


2. Attach the engine shut-off cord to a secure place on your clothing, or your arm or leg. Then install the clip on the other end of the cord into the engine shut-off switch.

# Operation

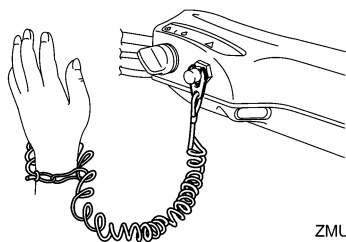


ZMU05216

3. Place the throttle grip in the “START” (start) position. After the engine starts, return the throttle to the fully closed position.

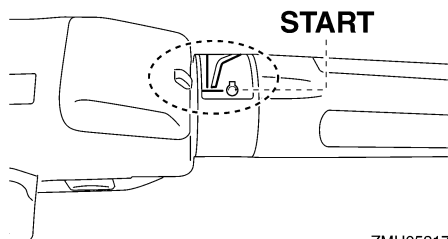

ZMU05217

4. Turn the main switch to “START” (start), and hold it for a maximum of 5 seconds.

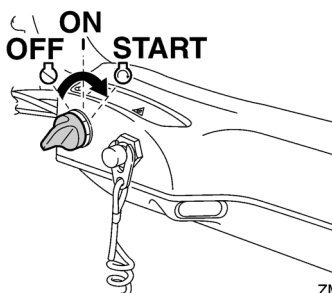

ZMU05218

5. Immediately after the engine starts, release the main switch and allow it to return to “ON” (on). **NOTICE: Never turn the main switch to “START” (start) while the engine is running. Do not**

keep the starter motor turning for more than 5 seconds. If the starter motor is turned continuously for more than 5 seconds, the battery will be quickly discharged, thus making it impossible to start the engine. The starter can also be damaged. If the engine will not start after 5 seconds of cranking, return the main switch to “ON” (on), wait 10 seconds, then crank the engine again. [ECM00192]

## TIP:

- When the engine is cold, it needs to be warmed up. For further information, see page 52.
- If the engine is warm and fails to start, open the throttle slightly and try to start the engine again. If the engine still fails to start, see page 84.

EMU27664

## Electric start and remote control models


EWM01840

### WARNING

- Failure to attached engine shut-off cord could result in a runaway boat if operator is ejected. Attach the engine shut-off cord to a secure place on your clothing, or your arm or leg while operating. Do not attach the cord to clothing that could tear loose. Do not route the cord where it could become entangled, preventing it from functioning.
- Avoid accidentally pulling the cord during normal operation. Loss of engine power means the loss of most steering control. Also, without engine power, the boat could slow rapidly. This could cause people and objects in the boat to be thrown forward.




1. Place the remote control lever in neutral.

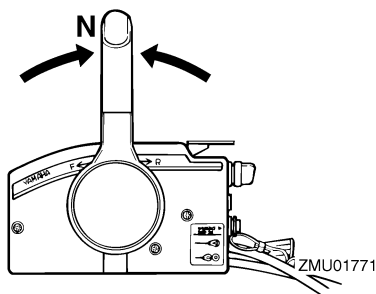


## TIP:

The start-in-gear protection device prevents the engine from starting except when in neutral.

2. Attach the engine shut-off cord to a secure place on your clothing, or your arm or leg. Then install the clip on the other end of the cord into the engine shut-off switch.

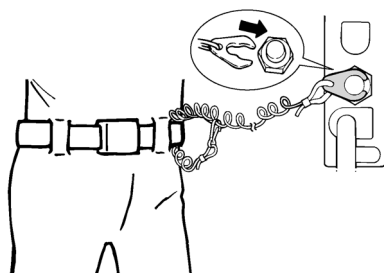

3. Turn the main switch to "ON" (on).
4. Turn the main switch to "START" (start), and hold it for a maximum of 5 seconds.

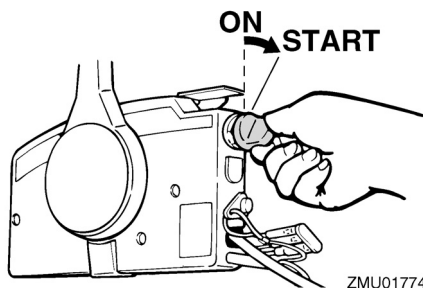

5. Immediately after the engine starts, release the main switch and allow it to return to "ON" (on). **NOTICE: Never turn the main switch to "START" (start) while the engine is running. Do not keep the starter motor turning for more than 5 seconds. If the starter motor is turned continuously for more than 5 seconds, the battery will be quickly discharged, thus making it impossible to start the engine. The starter can also be damaged. If the engine will not start after 5 seconds of cranking, return the main switch to "ON" (on), wait 10 seconds, then crank the engine again.** [ECM00192]

## TIP:

- When the engine is cold, it needs to be warmed up. For further information, see page 52.
- If the engine is warm and fails to start, open the throttle slightly and try to start the engine again. If the engine still fails to start, see page 84.

EMU36510

## Checks after starting engine

EMU36520

### Cooling water

Check for a steady flow of water from the cooling water pilot hole. A continuous flow of water from the pilot hole shows that the wa-

# Operation

---


ter pump is pumping water through the cooling passages. If the cooling passages are frozen, it may take a while for water to start flowing out of the pilot hole.

ECM01810

## NOTICE

**If water is not flowing out of the pilot hole at all times while the engine is running, overheating and serious damage could occur. Stop the engine and check whether the cooling water inlet on the lower case or the cooling water pilot hole is blocked. Consult your Yamaha dealer if the problem cannot be located and corrected.**

---

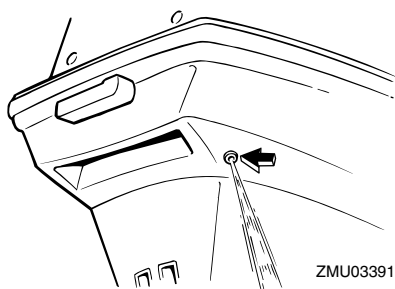

Check that no water leaks from the joints between the exhaust cover, cylinder head, and body cylinder.

EMU27670

## Warming up engine

EMU27683

### Choke start models

After starting the engine, allow it to idle for 3 minutes to warm up. Failure to do so will shorten engine life. Gradually return the choke knob to its home position as the engine warms up.

EMU27704

### Electric start and prime start models

After starting the engine, allow it to idle for 3 minutes to warm up. Failure to do so will

shorten engine life.

EMU36530

## Checks after engine warm-up

EMU36540

### Shifting

While tightly moored, and without applying throttle, confirm that the engine shifts smoothly into forward and reverse, and back to neutral.

EMU31721

### Stop switches

- Confirm that turning the main switch to the "OFF" (off) position stops the engine.
- Confirm that removing the clip from the engine shut-off switch stops the engine.
- Confirm that the engine cannot be started with the clip removed from the engine shut-off switch.

EMU34530

## Shifting

EWMM0180

## WARNING

**Before shifting, make sure there are no swimmers or obstacles in the water near you.**

---

ECM01610


## NOTICE

**Warm up the engine before shifting into gear. Until the engine is warm, the idle speed may be higher than normal. High idle speed can prevent you from shifting back to neutral. If this occurs, stop the engine, shift to neutral, then restart the engine and allow it to warm up.**


---

### To shift out of neutral

1. Pull the neutral interlock trigger up (if equipped).

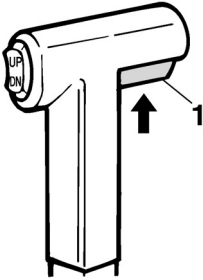


ZMU01727

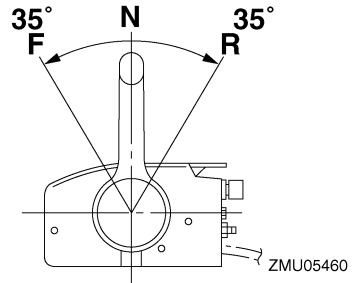

ZMU05460


1. Neutral interlock trigger
2. Move the remote control lever / gear shift lever firmly and crisply forward (for forward gear) or backward (for reverse gear) [about 35° (a detent can felt) for remote control models]. Be sure to check that the tilt lock lever is in the lock/down position (if equipped) before operating in reverse.

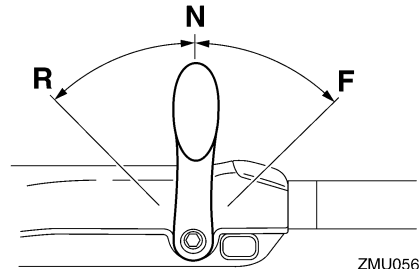


ZMU05674

To shift from in gear (forward/reverse) to neutral


1. Close the throttle so that the engine slows to idle speed.

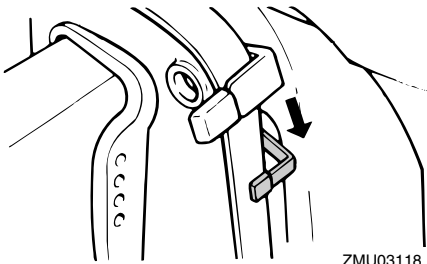

ZMU03118

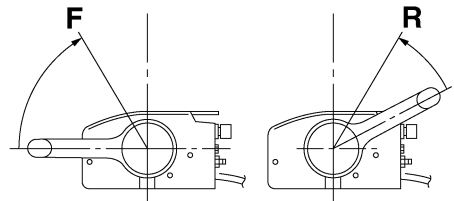


ZMU05462

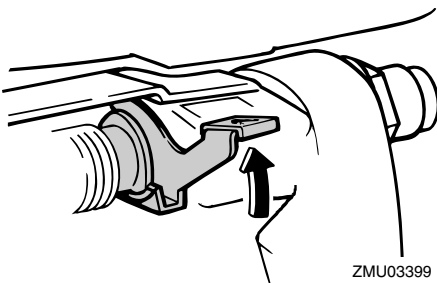


ZMU03399


# Operation

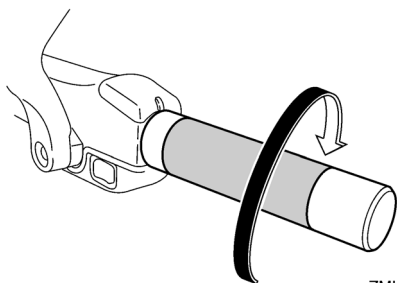


ZMU05219

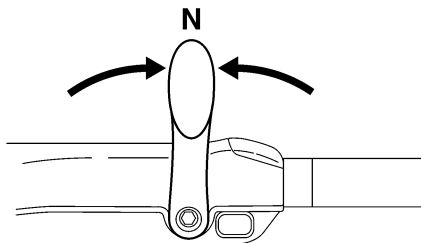

ZMU05215

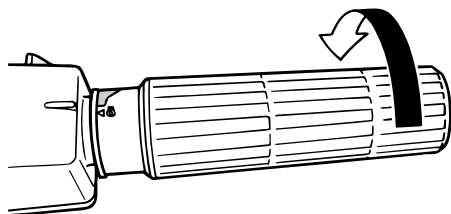

ZMU03396

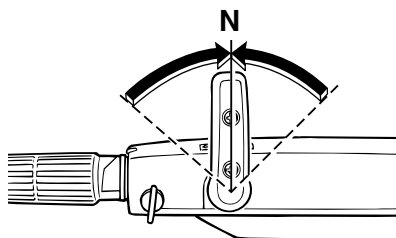

ZMU03404

2. After the engine is at idle speed in gear move the remote control lever / gear shift lever firmly and crisply into the neutral position.


EMU31742

## Stopping boat

EWMO1510

### **WARNING**

- Do not use the reverse function to slow down or stop the boat as it could cause you to lose control, be ejected, or impact the steering wheel or other parts of the boat. This could increase the risk of serious injury. It could also damage the shift mechanism.
- Do not shift into reverse while traveling at planing speeds. Loss of control, boat swamping, or damage to the boat could occur.

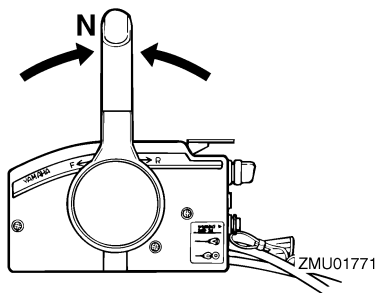

ZMU01771

The boat is not equipped with a separate braking system. Water resistance stops it after the throttle lever is moved back to idle. The stopping distance varies depending on gross weight, water surface conditions, and

wind direction.

EMU27821




## Stopping engine

Before stopping the engine, first let it cool off for a few minutes at idle or low speed. Stopping the engine immediately after operating at high speed is not recommended.


EMU27845

### Procedure


1. Push and hold the engine stop button or turn the main switch to "OFF" (off).

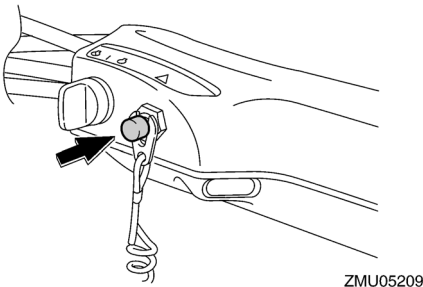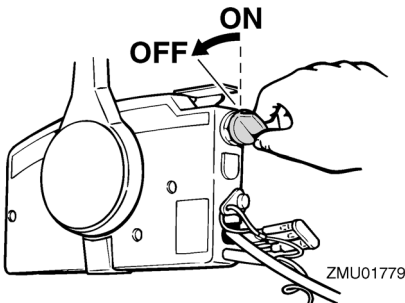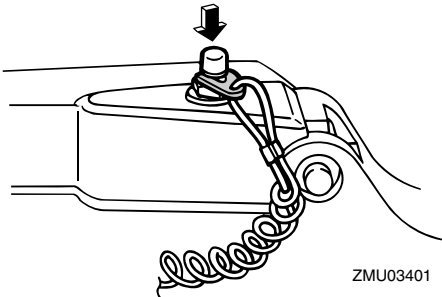

2. After stopping the engine, disconnect the fuel line if there is a fuel joint on the outboard motor.

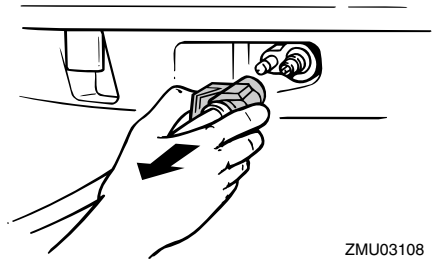

3. Tighten the air vent screw on the fuel tank cap (if equipped).

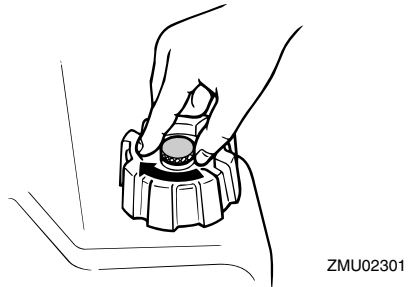

4. Remove the key if the boat will be left unattended.

### TIP:

The engine can also be stopped by pulling the cord and removing the clip from the engine shut-off switch, then turning the main switch to "OFF" (off).

EMU27862

## Trimming outboard motor

EWMM00740


### WARNING

Excessive trim for the operating conditions (either trim up or trim down) can cause boat instability and can make steering the boat more difficult. This increases the possibility of an accident. If

# Operation

**the boat begins to feel unstable or is hard to steer, slow down and/or readjust the trim angle.**

The trim angle of the outboard motor helps determine the position of the bow of the boat in the water. Correct trim angle will help improve performance and fuel economy while reducing strain on the engine. Correct trim angle depends upon the combination of boat, engine, and propeller. Correct trim is also affected by variables such as the load in the boat, sea conditions, and running speed.

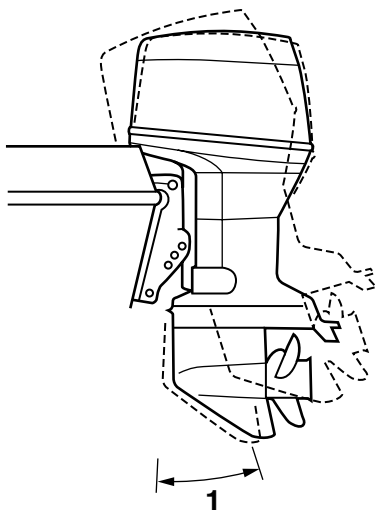

ZMU03109

1. Trim operating angle


EMU27872

## Adjusting trim angle for manual tilt models

There are 4 or 5 holes provided in the clamp bracket to adjust the outboard motor trim angle.


1. Stop the engine.

2. Tilt the outboard motor up, and then remove the trim rod from the clamp bracket.

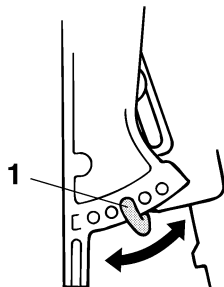

ZMU02408

1. Trim rod

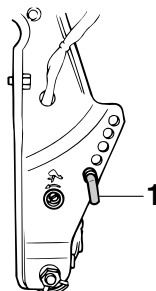

ZMU03402

1. Trim rod

3. Reposition the rod in the desired hole. To raise the bow ("trim-out"), move the rod away from the transom.

To lower the bow ("trim-in"), move the rod toward the transom.

Make test runs with the trim set to different angles to find the position that works best for your boat and operating conditions.

EWMM00400

### **WARNING**

- Stop the engine before adjusting the trim angle.
- Use care to avoid being pinched when

removing or installing the rod.

- Use caution when trying a trim position for the first time. Increase speed gradually and watch for any signs of instability or control problems. Improper trim angle can cause loss of control.

## TIP:

The outboard motor trim angle can be changed approximately 4 degrees by shifting the trim rod one hole.

EMU27884


## Adjusting trim angle (Power trim and tilt)

EWM00753

### WARNING


- Be sure all people are clear of the outboard motor when adjusting the trim angle. Body parts can be crushed between the motor and the clamp bracket when the motor is trimmed or tilted.
- Use caution when trying a trim position for the first time. Increase speed gradually and watch for any signs of instability or control problems. Improper trim angle can cause loss of control.
- If equipped with a power trim and tilt switch located on the bottom cowling, use the switch only when the boat is at a complete stop with the engine off. Do not adjust the trim angle with this switch while the boat is moving.

Adjust the outboard motor trim angle using the power trim and tilt switch.

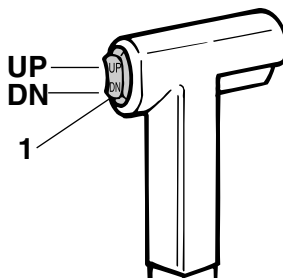


ZMU03110

1. Power trim and tilt switch

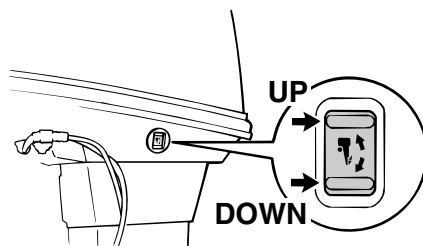

ZMU03096

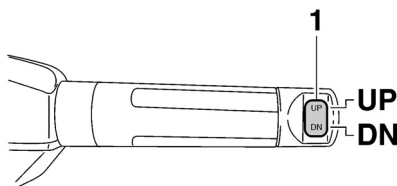

ZMU05224

1. Power trim and tilt switch

To raise the bow (trim-out), press the switch "UP" (up).

To lower the bow (trim-in), press the switch "DN" (down).

Make test runs with the trim set to different angles to find the position that works best for your boat and operating conditions.

# Operation

EMU27892


## Adjusting trim angle for hydro tilt models

EWM00491

### **WARNING**

- **Stop the engine before adjusting the trim angle.**
- **Be sure all people are clear of the out-board motor when adjusting the trim angle, also be careful not to pinch any body parts between the drive unit and clamp bracket.**
- **Use caution when trying a trim position for the first time. Increase speed gradually and watch for any signs of instability or control problems. Improper trim angle can cause loss of control.**

1. Stop the engine.
2. Place the tilt lock lever in the release position.

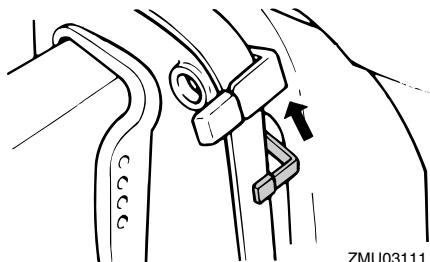

ZMU03111

3. Hold the rear of the top cowling with one hand and tilt the engine to the desired angle.
4. Place the tilt lock lever back into the lock position to support the engine.

To raise the bow ("trim-out"), tilt the engine up.

To lower the bow ("trim-in"), tilt the engine down.


Make test runs with the trim set to different angles to find the position that works best for

your boat and operating conditions.

EMU27911

## Adjusting boat trim

When the boat is on plane, a bow-up attitude results in less drag, greater stability and efficiency. This is generally when the keel line of the boat is up about 3 to 5 degrees. With the bow up, the boat may have a greater tendency to steer to one side or the other. Compensate for this as you steer. The trim tab can also be adjusted to help offset this effect. When the bow of the boat is down, it is easier to accelerate from a standing start onto plane.

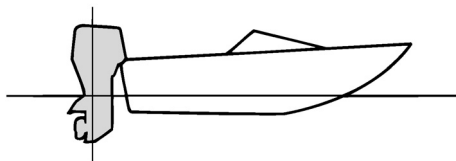


ZMU01784

## Bow Up

Too much trim-out puts the bow of the boat too high in the water. Performance and economy are decreased because the hull of the boat is pushing the water and there is more air drag. Excessive trim-out can also cause the propeller to ventilate, which reduces performance further, and the boat may "porpoise" (hop in the water), which could throw the operator and passengers overboard.




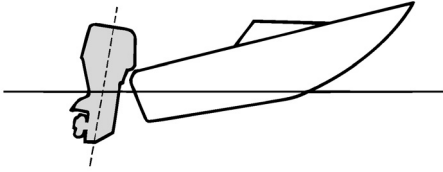

ZMU01785

## Bow Down

Too much trim-in causes the boat to “plow” through the water, decreasing fuel economy and making it hard to increase speed. Operating with excessive trim-in at higher speeds also makes the boat unstable. Resistance at the bow is greatly increased, heightening the danger of “bow steering” and making operation difficult and dangerous.

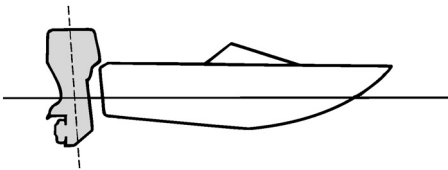

ZMU01786

## TIP:

Depending on the type of boat, the outboard motor trim angle may have little effect on the trim of the boat when operating.

EMU27934

## Tilting up and down

If the engine will be stopped for some time or if the boat is moored in shallows, the outboard motor should be tilted up to protect the propeller and lower casing from damage by collision with obstructions, and also to re-

duce salt corrosion.

EWM00221

## WARNING

Be sure all people are clear of the outboard motor when tilting up and down. Body parts can be crushed between the motor and the clamp bracket when the motor is trimmed or tilted.

EWM00250

## WARNING

Leaking fuel is a fire hazard. If there is a fuel joint on the outboard motor, disconnect the fuel line or close the fuel cock if the engine will be tilted for more than a few minutes. Otherwise fuel may leak.

ECM00241


## NOTICE

- Before tilting the outboard motor, stop the engine by following the procedure on page 55. Never tilt the outboard motor while the engine is running. Severe damage from overheating can result.
- Do not tilt up the engine by pushing the tiller handle (if equipped) because this could break the handle.

EMU27955

## Procedure for tilting up (manual tilt models)


1. Place the remote control lever / gear shift lever in neutral.

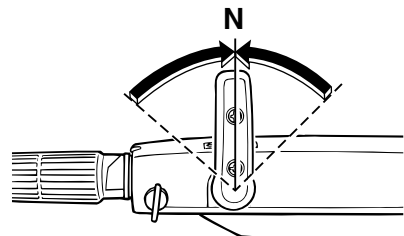

ZMU03404


# Operation

- Place the tilt lock lever in the release position.

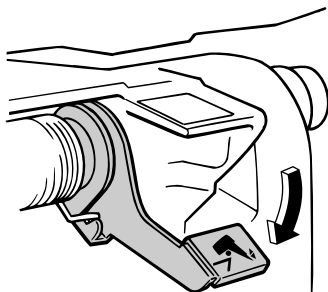

ZMU03405

- Hold the rear of the top cowling with one hand, tilt the engine up, and turn the tilt support lever to the lock position and support the engine. **NOTICE: Do not use the tilt support lever or knob when trailering the boat. The outboard motor could shake loose from the tilt support and fall. If the motor cannot be trailered in the normal running position, use an additional support device to secure it in the tilt position. For more detailed information, see page 67.** [ECM01641]

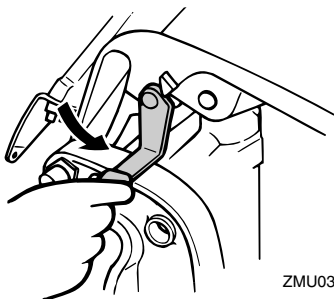


ZMU03114


EMU33142

## Procedure for tilting up (hydro tilt models)

- Place the remote control lever in neutral.

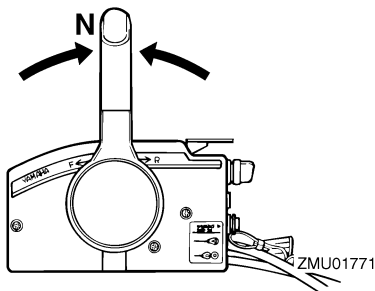


ZMU01771

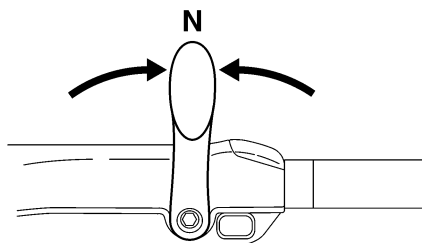

ZMU05215


- Place the tilt lock lever in the release position.

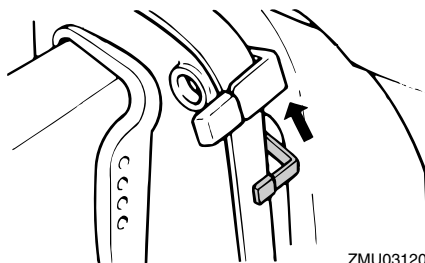

ZMU03120

- Hold the rear of the top cowling with one hand, tilt the engine up, and turn the tilt support lever toward you or tilt support knob into the clamp bracket, and then place the tilt lock lever back into the lock position to support the outboard motor. **NOTICE: Do not use the tilt support lever or knob when trailering the boat. The outboard motor could**

shake loose from the tilt support and fall. If the motor cannot be trailered in the normal running position, use an additional support device to secure it in the tilt position. For more detailed information, see page 67. [ECM01641]

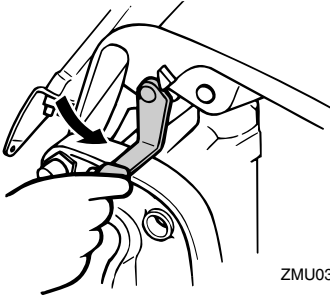


ZMU03114


EMU32723

## Procedure for tilting up (power trim and tilt models)

1. Place the remote control lever in neutral.

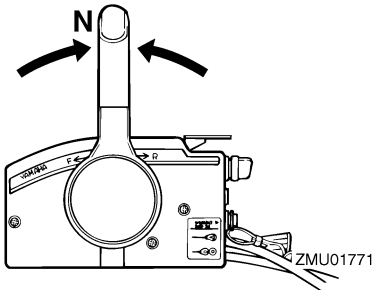


ZMU01771

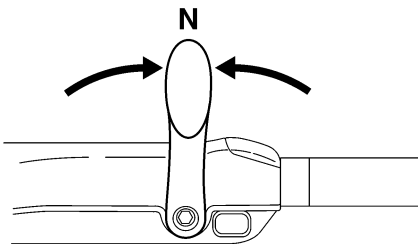


ZMU05215

2. Press the power trim and tilt switch "UP"


(up) until the outboard motor has tilted up completely.

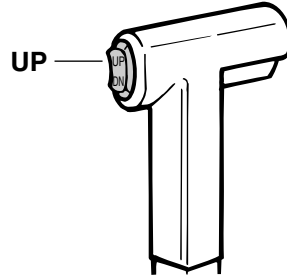

ZMU01935

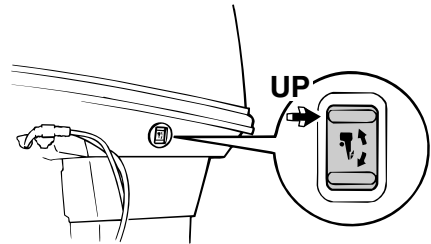

ZMU04993

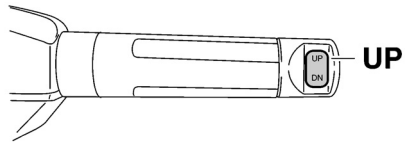


ZMU05226

3. Pull the tilt support lever toward you to support the engine. **WARNING!** After tilting the outboard motor, be sure to support it with the tilt support knob or tilt support lever. Otherwise the outboard motor could fall back down suddenly if oil in the power trim and tilt unit or in the power tilt unit loses pressure. [EWM00262] **NOTICE:** Do not use

# Operation

the tilt support lever or knob when trailering the boat. The outboard motor could shake loose from the tilt support and fall. If the motor cannot be trailered in the normal running position, use an additional support device to secure it in the tilt position. For more detailed information, see page 67. [ECM01641]

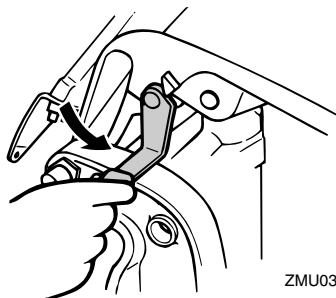


ZMU03115

4. Models equipped with trim rods: Once the outboard motor is supported with the tilt support lever, press the power trim and tilt switch “DN” (down) to retract the trim rods. **NOTICE:** Be sure to retract the trim rods completely during mooring. This protects the rods from marine growth and corrosion which could damage the power trim and tilt mechanism. [ECM00251]

EMU30411

## Procedure for tilting down (manual tilt models)

1. Slightly tilt the engine up.
2. On models equipped with a tilt support lever, return it to the release position.

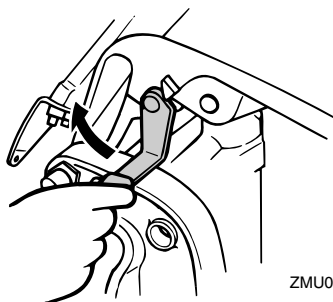


ZMU02569

3. Slowly tilt the engine down.

EMU28041


## Procedure for tilting down (manual and hydro tilt models)

1. Release the tilt lock lever.

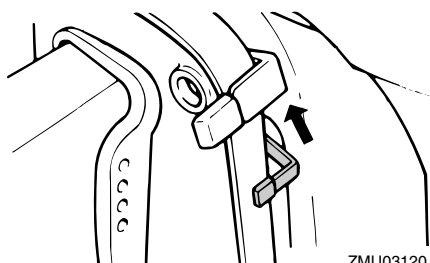

ZMU03120


2. Hold the rear of the top cowling with one hand, tilt the outboard motor up slightly and pull out the tilt support knob or return the tilt support lever.

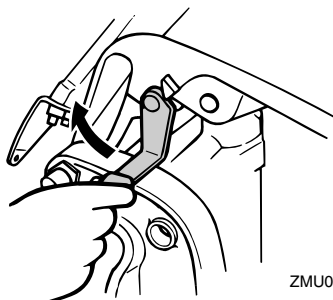

ZMU02569

3. Slowly tilt the outboard motor down.
4. Place the tilt lock lever in the lock position.

tion.

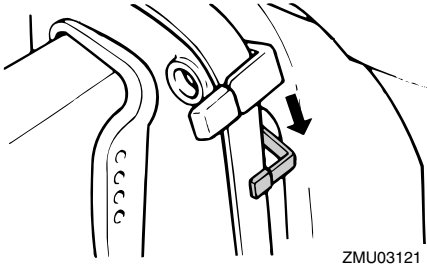


ZMU03121

EMU33120


## Procedure for tilting down (power trim and tilt models)

1. Push the power trim and tilt switch “UP” (up) until the outboard motor is supported by the tilt rod and the tilt support lever becomes free.
2. Release the tilt support lever.

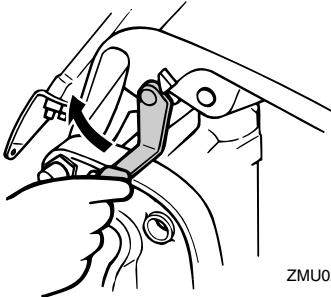


ZMU02569


3. Push the power trim and tilt switch “DN” (down) to lower the outboard motor to the desired position.

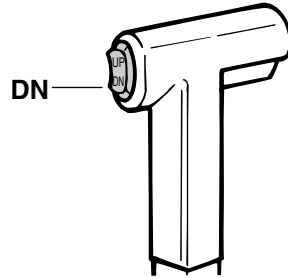

ZMU01936

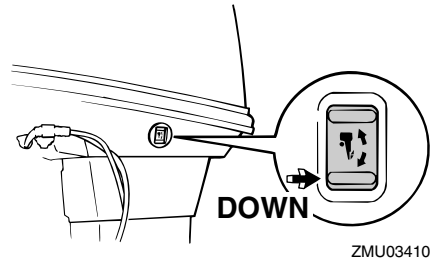

ZMU03410

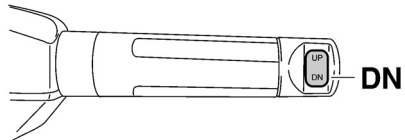

ZMU05228

EMU28061

## Shallow water

EMU28081

### Hydro tilt models

The outboard motor can be tilted up partially to allow operation in shallow water.

EWIM00271



**WARNING**

- Run the boat at the lowest possible speed when using the shallow water

# Operation

cruising system.

- Use extra care when operating in reverse. Too much reverse thrust can cause the outboard motor to lift out of the water, increasing the chance of accident and personal injury.

ECM00260


## NOTICE

Do not tilt the outboard motor up so that the cooling water inlet on the lower unit is above the surface of the water when setting up for and cruising in shallow water. Otherwise severe damage from overheating can result.


EMU32830

### Procedure for hydro tilt models

1. Place the remote control lever in neutral.

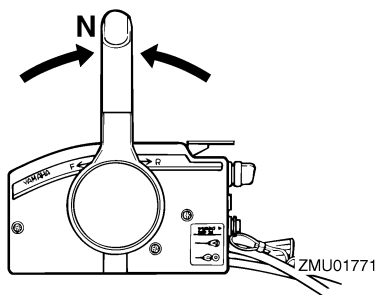


2. Pull the tilt lock lever up to the release position.

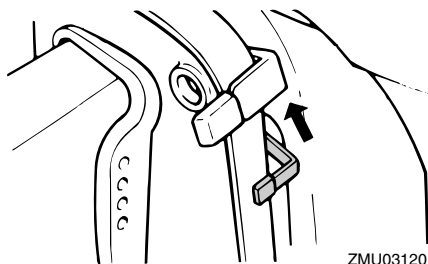

3. Slightly tilt the outboard motor up to the

desired position and push the tilt lock lever down to the lock position.

4. To return the outboard motor to the normal running position, pull the tilt lock lever up to the release position and slowly tilt the outboard motor down.
5. Push the tilt lock lever down to the lock position.

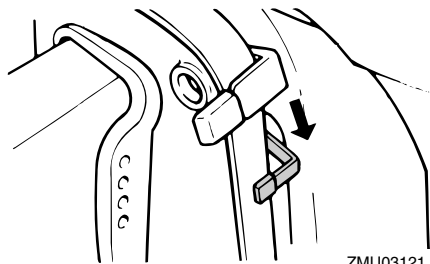

ZMU03121

EMU32851

### Power trim and tilt models

The outboard motor can be tilted up partially to allow operation in shallow water.

ECM00260


## NOTICE

Do not tilt the outboard motor up so that the cooling water inlet on the lower unit is above the surface of the water when setting up for and cruising in shallow water. Otherwise severe damage from overheating can result.


EMU32922

### Procedure for power trim and tilt models


1. Place the remote control lever in neutral.

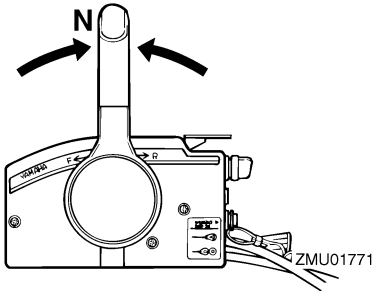


ZMU01771

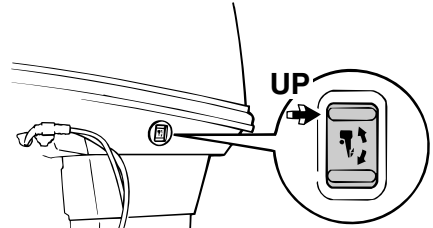

ZMU03412

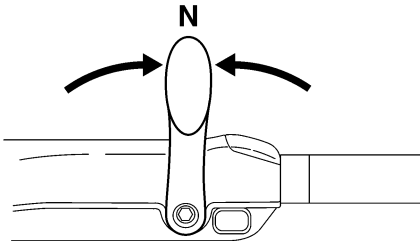

ZMU05215

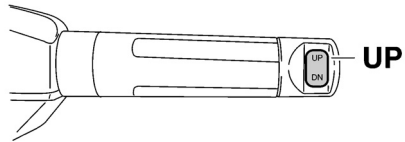

ZMU05226

2. Slightly tilt the outboard motor up to the desired position using the power trim and tilt switch. **WARNING! Using the power trim and tilt switch on the bottom cowling while the boat is moving or engine is on could increase the risk of falling overboard and could distract the operator, increasing the risk of collision with another boat or an obstacle.** [EWM01850]

3. To return the outboard motor to the normal running position, press the power trim and tilt switch and slowly tilt the outboard motor down.

EMU28194


## Cruising in other conditions

### Cruising in salt water

After operating in salt water, flush the cooling water passages with fresh water to prevent them from becoming clogged. Also rinse the outside of the outboard motor with fresh water and, if possible, rinse the power head under the cowling.

### Cruising in muddy, turbid, or acidic water

Yamaha strongly recommends that you use the optional chromium-plated water pump kit (see page 13) if you use the outboard motor in acidic water or water with a lot of sediment in it, such as muddy or turbid (cloudy) water. After operating in such water, flush the cooling passages with fresh water to prevent cor-

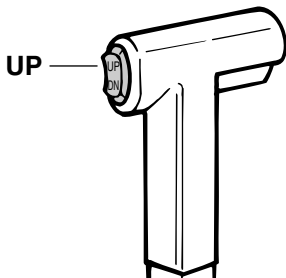

ZMU01935

# Operation

---

rosion. Also rinse the outside of the outboard motor with fresh water.



EMU28226

## Transporting and storing outboard motor

EWM00692

### WARNING

- **USE CARE** when transporting fuel tank, whether in a boat or car.
- **DO NOT** fill fuel container to maximum capacity. Gasoline will expand considerably as it warms up and can build up pressure in the fuel container. This can cause fuel leakage and a potential fire hazard.

EWM01860

### WARNING

Leaking fuel is a fire hazard. When transporting and storing the outboard motor, close the fuel cock to prevent fuel from leaking. Never get under the engine while it is tilted. Severe injury could occur if the outboard motor accidentally falls.

ECM00660

### **NOTICE**

Do not use the tilt support lever or knob when trailering the boat. The outboard motor could shake loose from the tilt support and fall. If the motor cannot be trailered in the normal running position, use an additional support device to secure it in the tilt position.


The outboard motor should be trailered and stored in the normal running position. If there is insufficient road clearance in this position, then trailer the outboard motor in the tilt position using a motor support device such as a transom saver bar. Consult your Yamaha dealer for further details.

EMU28235

## Clamp screw mounting models

When transporting or storing the outboard

motor while removed from a boat, keep the outboard motor in the attitude shown.

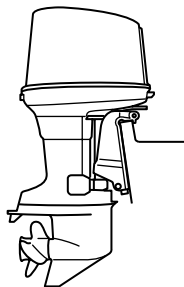

ZMU03122

### **TIP:**

Place a towel or something similar under the outboard motor to protect it from damage.

EMU30272

## Storing outboard motor

When storing your Yamaha outboard motor for prolonged periods of time (2 months or longer), several important procedures must be performed to prevent excessive damage. It is advisable to have your outboard motor serviced by an authorized Yamaha dealer prior to storage. However, you, the owner, with a minimum of tools, can perform the following procedures.

ECM01411

### **NOTICE**

- **Do not place the outboard motor on its side before the cooling water has drained from it completely, otherwise water may enter the cylinder through the exhaust port and cause engine trouble.**
- **Store the outboard motor in a dry, well-ventilated place, not in direct sunlight.**

# Maintenance

EMU28303

## Procedure

EMU28334

### Flushing in a test tank


ECM00300

#### NOTICE

**Do not run the engine without supplying it with cooling water. Either the engine water pump will be damaged or the engine will be damaged from overheating. Before starting the engine, be sure to supply water to the cooling water passages.**

1. Wash the outboard motor body using fresh water. **NOTICE: Do not spray water into the air intake.** [ECM01840] For further information, see page 69.
2. Disconnect the fuel line from the motor or shut off the fuel cock, if equipped.
3. Remove the engine top cowling and silencer cover. Remove the propeller.
4. Install the outboard motor on the test tank. Fill the tank with fresh water to above the level of the anti-cavitation plate. **NOTICE: If the fresh water level is below the level of the anti-cavitation plate, or if the water supply is insufficient, engine seizure may occur.**

[ECM00291]

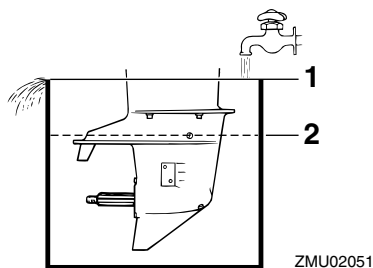

1. Water surface
2. Lowest water level

5. Cooling system flushing is essential to prevent the cooling system from clogging up with salt, sand, or dirt. In addition, fogging/lubricating of the engine is mandatory to prevent excessive engine damage due to rust. Perform the flushing and fogging at the same time. **WARNING! Do not touch or remove electrical parts when starting or during operation. Keep hands, hair, and clothes away from the flywheel and other rotating parts while the engine is running.** [EWM00091]
6. Run the engine at a fast idle for a few minutes in neutral position.
7. Just prior to turning off the engine, quickly spray "Fogging Oil" alternately into each carburetor or the fogging hole of the silencer cover, if equipped. When properly done, the engine will smoke excessively and almost stall.
8. Remove the outboard motor from the test tank.
9. Install the silencer cover/cap of fogging hole and top cowling.
10. If the "Fogging Oil" is not available, run the engine at a fast idle until the fuel system becomes empty and the engine stops.
11. Drain the cooling water completely out of the motor. Clean the body thoroughly.
12. If the "Fogging Oil" is not available, remove the spark plug(s). Pour a teaspoonful of clean engine oil into each cylinder. Crank several times manually. Replace the spark plug(s).
13. Drain the fuel from the fuel tank.

#### TIP:

Store the fuel tank in a dry, well-ventilated place, not in direct sunlight.

EMU28411

## Lubrication (oil injection models)

1. Install the spark plug(s) and torque to proper specification. For information on spark plug installation, see page 75.
2. Fill the oil tanks. This prevents the formation of condensation. For models with a remote oil tank, it may be necessary to manually override the control unit to completely fill the engine oil tank.
3. Change the gear oil. For instructions, see page 79. Inspect the oil for the presence of water which indicates a leaky seal. Seal replacement should be performed by an authorized Yamaha dealer prior to use.
4. Grease all grease fittings. For further details, see page 74.


### TIP:

For long-term storage, fogging the engine with oil is recommended. Contact your Yamaha dealer for information about fogging oil and procedures for your engine.

EMU28450

## Cleaning the outboard motor

After use, wash the exterior of the outboard motor with fresh water. Flush the cooling system with fresh water.

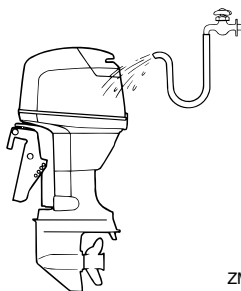

ZMU03223

### TIP:

For cooling system flushing instructions, see page 67.

EMU28460

## Checking painted surface of motor

Check the motor for scratches, nicks, or flaking paint. Areas with damaged paint are more likely to corrode. If necessary, clean and paint the areas. A touch-up paint is available from your Yamaha dealer.

EMU2847A

## Periodic maintenance

EWMO1871



### WARNING

These procedures require mechanical skills, tools, and supplies. If you do not have the proper skills, tools, or supplies to perform a maintenance procedure, have a Yamaha dealer or other qualified mechanic do the work.

The procedures involve disassembling the motor and exposing dangerous parts. To reduce the risk of injury from moving, hot, or electrical parts:

- Turn off the engine and keep the key(s) and engine shut-off cord (lanyard) with you when you perform maintenance unless otherwise specified.
- The power trim and tilt switches operate even when the ignition key is off. Keep people away from the switches whenever working around the motor. When the motor is tilted, keep away from the area under it or between it and the clamp bracket. Be sure no one is in this area before operating the power trim and tilt mechanism.
- Allow the engine to cool before handling hot parts or fluids.
- Always completely reassemble the motor before operation.

EMU28511

## Replacement parts

If replacement parts are necessary, use only

# Maintenance

---

genuine Yamaha parts or parts of equivalent design and quality. Any part of inferior quality may malfunction, and the resulting loss of control could endanger the operator and passengers. Yamaha genuine parts and accessories are available from your Yamaha dealer.

EMU34150

## Severe operating conditions

Severe operating conditions involve one or more of the following types of operation on a regular basis:

- Operating continuously at or near maximum engine speed (rpm) for many hours
- Operating continuously at a low engine speed (rpm) for many hours
- Brief periods of rapid acceleration and deceleration followed by engine shut off before the engine has reached proper operating temperature
- Frequent quick acceleration and deceleration
- Frequent shifting
- Frequently starting and stopping the engine(s)
- Operation that fluctuates often between light and heavy cargo loads

Outboard motors operating under any of these above conditions require more frequent maintenance. Yamaha recommends that you do this service twice as often as specified in the maintenance chart. For example, if a particular service should be done at 50 hours, do it instead at 25 hours. This will help prevent more rapid deterioration of engine components.

EMU34445

## Maintenance chart 1

### TIP:

- Refer to the sections in this chapter for explanations of each owner-specific action.
- The maintenance cycle on these charts assume usage of 100 hours per year and regular flushing of the cooling water passages. Maintenance frequency should be adjusted when operating the engine under adverse conditions such as extended trolling.
- Disassembly or repairs may be necessary depending on the outcome of maintenance checks.
- Expendable or consumable parts and lubricants will lose their effectiveness over time and through normal usage regardless of the warranty period.
- When operating in salt water, muddy, other turbid (cloudy), acidic water, the engine should be flushed with clean water after each use.

The “●” symbol indicates the check-ups which you may carry out yourself.

The “○” symbol indicates work to be carried out by your Yamaha dealer.

| Item                                                                           | Actions                                  | Initial                | Every              |                     |                     |
|--------------------------------------------------------------------------------|------------------------------------------|------------------------|--------------------|---------------------|---------------------|
|                                                                                |                                          | 20 hours<br>(3 months) | 100 hours (1 year) | 300 hours (3 years) | 500 hours (5 years) |
| Anode(s) (external)                                                            | Inspection or replacement as necessary   |                        | ●/○                |                     |                     |
| Anode(s) (cylinder head, thermostat cover)                                     | Inspection or replacement as necessary   |                        |                    |                     | ○                   |
| Anodes (exhaust cover, cooling water passage cover, Rectifier Regulator cover) | Replacement                              |                        |                    |                     | ○                   |
| Battery (electrolyte level, terminal)                                          | Inspection                               | ●/○                    | ●/○                |                     |                     |
| Battery (electrolyte level, terminal)                                          | Fill, charging or replacing as necessary |                        | ○                  |                     |                     |
| Cooling water leakage                                                          | Inspection or replacement as necessary   | ○                      | ○                  |                     |                     |
| Cowling clamp                                                                  | Inspection                               |                        | ●/○                |                     |                     |
| Engine starting condition/Noise                                                | Inspection                               | ●/○                    | ●/○                |                     |                     |
| Engine idling speed/ Noise                                                     | Inspection                               | ●/○                    | ●/○                |                     |                     |
| Fuel filter (can be disassembled)                                              | Inspection or replacement as necessary   | ●/○                    | ●/○                |                     |                     |
| Fuel line(High pressure)                                                       | Inspection                               | ●                      | ●                  |                     |                     |

# Maintenance

| Item                                                    | Actions                                            | Initial                | Every              |                     |                     |  |
|---------------------------------------------------------|----------------------------------------------------|------------------------|--------------------|---------------------|---------------------|--|
|                                                         |                                                    | 20 hours<br>(3 months) | 100 hours (1 year) | 300 hours (3 years) | 500 hours (5 years) |  |
| Fuel line(High pressure)                                | Inspection or replacement as necessary             | ○                      | ○                  |                     |                     |  |
| Fuel line(Low pressure)                                 | Inspection                                         | ●                      | ●                  |                     |                     |  |
| Fuel line(Low pressure)                                 | Inspection or replacement as necessary             | ○                      | ○                  |                     |                     |  |
| Fuel pump                                               | Inspection or replacement as necessary             |                        |                    | ○                   |                     |  |
| Fuel/oil leakage                                        | Inspection                                         | ○                      | ○                  |                     |                     |  |
| Gear oil                                                | Replacement                                        | ●/○                    | ●/○                |                     |                     |  |
| Greasing points                                         | Greasing                                           | ●/○                    | ●/○                |                     |                     |  |
| Impeller/water pump housing                             | Inspection or replacement as necessary             |                        | ○                  |                     |                     |  |
| Impeller/water pump housing                             | Replacement                                        |                        |                    | ○                   |                     |  |
| Oil tank water drain                                    | Inspection or cleaning                             | ●/○                    | ●/○                |                     |                     |  |
| Oil injection pump/oil feed pump                        | Inspection or Adjustment                           | ○                      | ○                  |                     |                     |  |
| Power trim & tilt unit/ Operation,noise and oil leakage | Inspection                                         | ●/○                    | ●/○                |                     |                     |  |
| Propeller/Propeller nut/ Cotter pin                     | Inspection or replacement as necessary             | ●/○                    | ●/○                |                     |                     |  |
| Shift link/shift cable                                  | Inspection, adjustment or replacement as necessary | ○                      | ○                  |                     |                     |  |
| Spark plug(s)                                           | Inspection or replacement as necessary             |                        | ●/○                |                     |                     |  |
| Spark plug caps/high tension cords                      | Inspection or replacement as necessary             | ○                      | ○                  |                     |                     |  |
| Water from the cooling water pilot hole                 | Inspection                                         | ●/○                    | ●/○                |                     |                     |  |
| Throttle link/Throttle cable/Throttle pick-up timing    | Inspection, adjustment or replacement as necessary | ○                      | ○                  |                     |                     |  |
| Thermostat                                              | Inspection or replacement as necessary             |                        | ○                  |                     |                     |  |
| Water inlet                                             | Inspection                                         | ●/○                    | ●/○                |                     |                     |  |

# Maintenance

| Item                                 | Actions                                | Initial                | Every              |                     |                     |
|--------------------------------------|----------------------------------------|------------------------|--------------------|---------------------|---------------------|
|                                      |                                        | 20 hours<br>(3 months) | 100 hours (1 year) | 300 hours (3 years) | 500 hours (5 years) |
| Main switch/stop switch/choke switch | Inspection or replacement as necessary | ○                      | ○                  |                     |                     |
| (Yamaha) Meter/gauge                 | Inspection                             | ○                      | ○                  |                     |                     |
| (Yamaha) Fuel tank                   | Inspection and cleaning as necessary   |                        | ○                  |                     |                     |

EMU34451

## Maintenance chart 2

| Item                           | Actions                                | Every      |
|--------------------------------|----------------------------------------|------------|
|                                |                                        | 1000 hours |
| Guide exhaust/exhaust manifold | Inspection or replacement as necessary | ○          |

# Maintenance


EMU28941

## Greasing

Yamaha grease A (water resistant grease)

Yamaha grease D (corrosion resistant grease; for propeller shaft)


40VMHO, 50HMHO

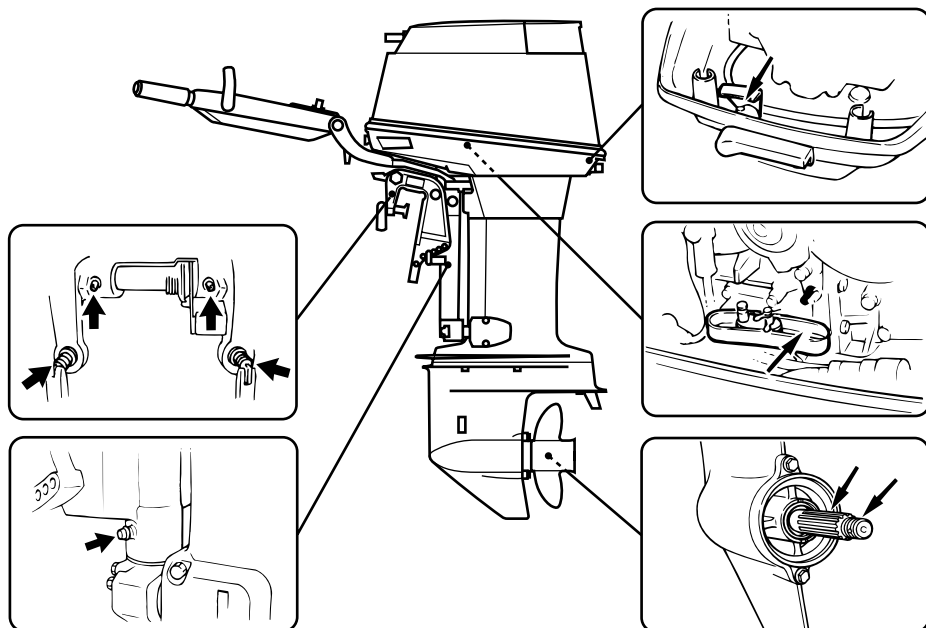

ZMU03415



40VEO, 40VETO, 40YETO, 50HEDO, 50HETO

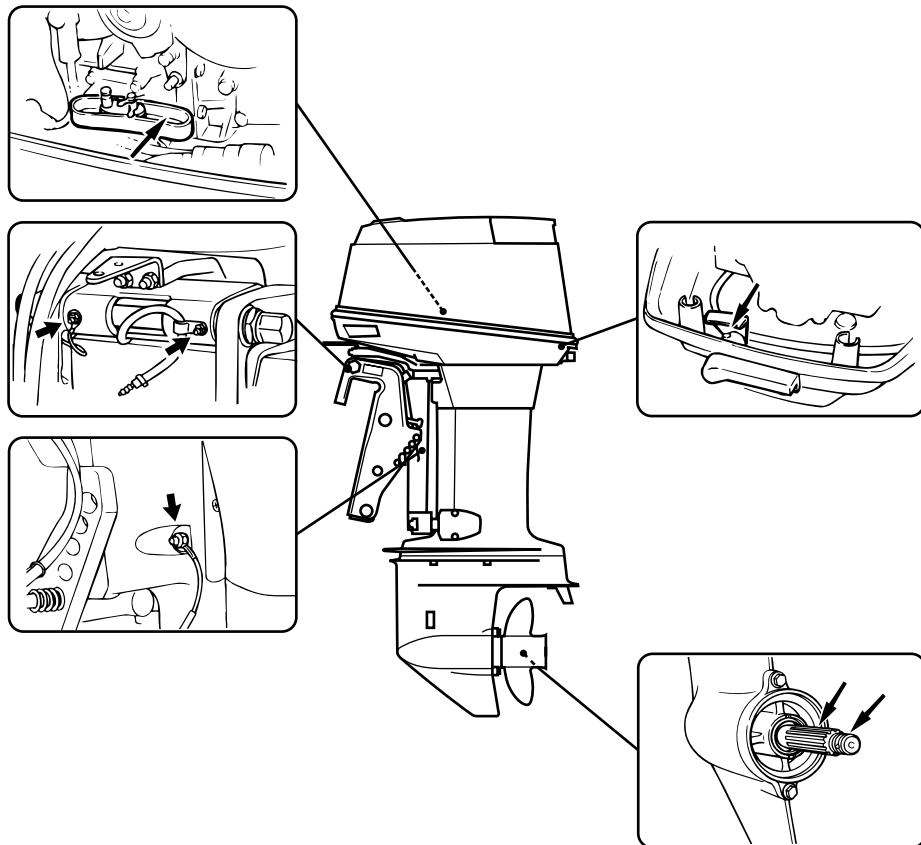

ZMU03414

EMU28955

## Cleaning and adjusting spark plug

The spark plug is an important engine component and is easy to inspect. The condition of the spark plug can indicate something about the condition of the engine. For example, if the center electrode porcelain is very white, this could indicate an intake air leak or carburetion problem in that cylinder. Do not attempt to diagnose any problems yourself. Instead, take the outboard motor to a Yamaha dealer. You should periodically re-

move and inspect the spark plug because heat and deposits will cause the spark plug to slowly break down and erode. If electrode erosion becomes excessive, or if carbon and other deposits are excessive, you should replace the spark plug with another of the correct type.

1. Remove the spark plug caps from the spark plugs.
2. Remove the spark plug. If electrode erosion becomes excessive, or if carbon and other deposits are excessive, you


# Maintenance

should replace the spark plug with another of the correct type. **WARNING!** When removing or installing a spark plug, be careful not to damage the insulator. A damaged insulator could allow external sparks, which could lead to explosion or fire. [EWM00561]

Standard spark plug:

40VEO B7HS-10  
40VETO B7HS-10  
40VMHO B7HS-10  
40YETO B8HS-10  
50HEDO B8HS-10  
50HETO B8HS-10  
50HMHO B8HS-10  
40VEO BR7HS-10  
40VETO BR7HS-10  
40VMHO BR7HS-10  
40YETO BR8HS-10  
50HEDO BR8HS-10  
50HETO BR8HS-10  
50HMHO BR8HS-10

3. Be sure to use the specified spark plug, otherwise the engine may not operate properly. Before fitting the spark plug, measure the electrode gap with a wire thickness gauge; adjust the gap to specification if necessary.

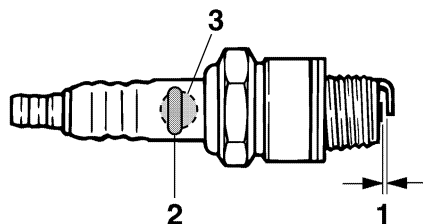

ZMU02179

Spark plug gap:  
0.9–1.0 mm (0.035–0.039 in)

4. When fitting the plug, wipe off any dirt from the threads, and then screw it in to the correct torque.

Spark plug torque:  
25.0 Nm (2.55 kgf-m, 18.4 ft-lb)


## TIP:

If a torque-wrench is not available when you are fitting a spark plug, a good estimate of the correct torque is 1/4 to 1/2 a turn past finger-tight. Have the spark plug adjusted to the correct torque as soon as possible with a torque-wrench.

EMU37450

## Checking fuel filter

Check the fuel filter periodically. If any water or foreign matter is found in the filter, clean or replace it. For cleaning or replacement of the fuel filter, consult your Yamaha dealer.

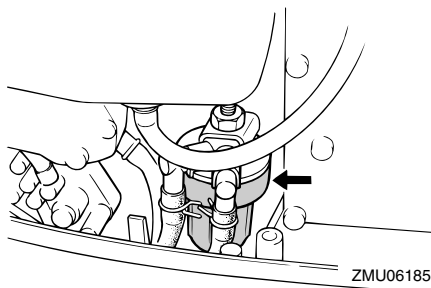

EMU29041

## Inspecting idling speed

EWM00451

### **WARNING**

- Do not touch or remove electrical parts when starting or during operation.
- Keep hands, hair, and clothes away from the flywheel and other rotating parts while the engine is running.

ECM00490

### **NOTICE**

This procedure must be performed while the outboard motor is in the water. A flushing attachment or test tank can be used.

A diagnostic tachometer should be used for this procedure. Results may vary depending on whether testing is conducted with the flushing attachment, in a test tank, or with the outboard motor in the water.

1. Start the engine and allow it to warm up fully in neutral until it is running smoothly.

### **TIP:**

Correct idling speed inspection is only possible if the engine is fully warmed up. If not warmed up fully, the idle speed will measure higher than normal. If you have difficulty verifying the idle speed, or the idle speed requires adjustment, consult a Yamaha dealer


or other qualified mechanic.

2. Verify whether the idle speed is set to specification. For idle speed specifications, see page 9.

EMU29061


## Checking water in engine oil tank

A translucent water drain hose is connected from the bottom of the oil tank to the filler neck. If water or foreign matter collects in this hose, consult a Yamaha dealer.

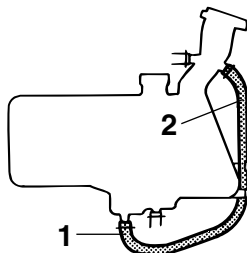

ZMU03416

1. Drain hose
2. Filler neck side

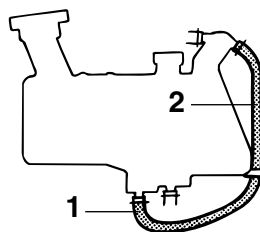

ZMU04989

1. Drain hose
2. Filler neck side


EMU29112

## Checking wiring and connectors

- Check that each grounding wire is properly secured.
- Check that each connector is engaged se-

# Maintenance

curely.

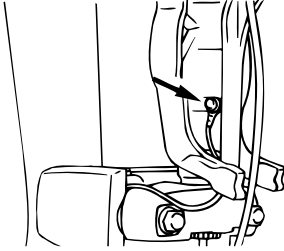

ZMU03240

EMU32111

## Checking propeller

EWMO1880




### WARNING

You could be seriously injured if the engine accidentally starts when you are near the propeller.

- Before inspecting, removing, or installing the propeller, place the shift control in neutral, turn the main switch to “OFF” (off) and remove the key, and remove the clip from the engine shut-off switch. Turn off the battery cut-off switch if your boat has one.


Do not use your hand to hold the propeller when loosening or tightening the propeller nut. Put a wood block between the anti-cavitation plate and the propeller to prevent the propeller from turning.

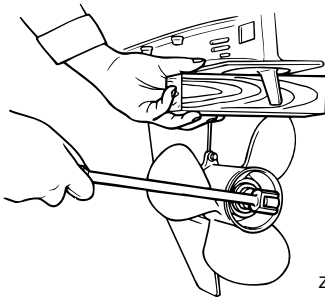

ZMU01897

## Checkpoints

- Check each of the propeller blades for wear, erosion from cavitation or ventilation, or other damage.
- Check the propeller shaft for damage.
- Check the splines for wear or damage.
- Check for fish line tangled around the propeller shaft.

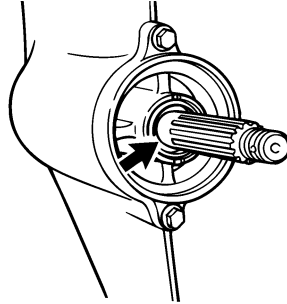

ZMU02274

- Check the propeller shaft oil seal for damage.

EMU30661


## Removing propeller

EMU29197

### Spline models

1. Straighten the cotter pin and pull it out using a pair of pliers.
2. Remove the propeller nut, washer, and spacer (if equipped). **WARNING! Do not use your hand to hold the propeller when loosening the propeller nut.**

[EWMO1890]

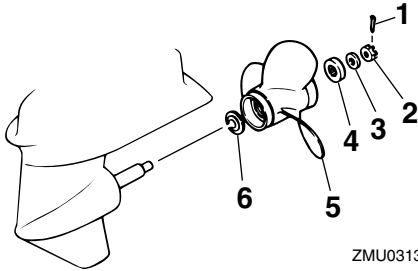

ZMU03131

1. Cotter pin
2. Propeller nut
3. Washer
4. Spacer
5. Propeller
6. Thrust washer

3. Remove the propeller, washer (if equipped), and thrust washer.

EMU30671

## Installing propeller

EMU29233

### Spline models

ECM00500

#### **NOTICE**


**Be sure to use a new cotter pin and bend the ends over securely. Otherwise the propeller could come off during operation and be lost.**

1. Apply Yamaha marine grease or a corrosion resistant grease to the propeller shaft.
2. Install the spacer (if equipped), thrust washer, washer (if equipped), and propeller on the propeller shaft. **NOTICE:** Be sure to install the thrust washer before installing the propeller, otherwise the lower case and propeller boss could be damaged. [ECM01880]
3. Install the spacer (if equipped) and the washer. Tighten the propeller nut to the

specified torque.

Propeller nut tightening torque:  
35.0 Nm (3.57 kgf-m, 25.8 ft-lb)

4. Align the propeller nut with the propeller shaft hole. Insert a new cotter pin in the hole and bend the cotter pin ends. **NOTICE:** Do not reuse the cotter pin installed. Otherwise the propeller can come off during operation. [ECM01890]

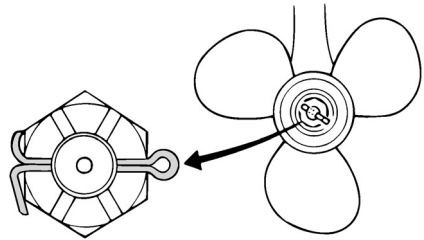

ZMU01805

#### **TIP:**

If the propeller nut does not align with the propeller shaft hole after tightening to the specified torque, tighten the nut further to align it with the hole.

EMU29287

## Changing gear oil

EWMM00800

#### **WARNING**


- Be sure the outboard motor is securely fastened to the transom or a stable stand. You could be severely injured if the outboard motor falls on you.
- Never get under the lower unit while it is tilted, even when the tilt support lever or knob is locked. Severe injury could occur if the outboard motor accidentally falls.

1. Tilt the outboard motor so that the gear oil drain screw is at the lowest point pos-

# Maintenance

sible.

2. Place a suitable container under the gear case.
3. Remove the gear oil drain screw and gasket. **NOTICE: If there is an excessive quantity of metal particles on the magnetic gear oil drain screw, this can indicate lower unit problem. Consult your Yamaha dealer.** [ECM01900]

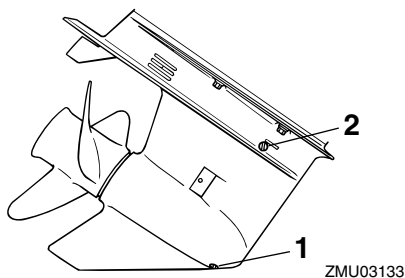

1. Gear oil drain screw
2. Oil level plug

## TIP:

- If a magnetic gear oil drain screw is equipped, remove all metal particles from the screw before installing it.
  - Always use new gaskets. Do not reuse the removed gaskets.
4. Remove the oil level plug and gasket to allow the oil to drain completely. **NOTICE: Inspect the used oil after it has been drained. If the oil is milky, water is getting into the gear case which can cause gear damage. Consult a Yamaha dealer for repair of the lower unit seals.** [ECM00711]

## TIP:

For disposal of used oil, consult your Yamaha dealer.

5. Put the outboard motor in a vertical position. Using a flexible or pressurized fill-


ing device, inject the gear oil into the gear oil drain screw hole.

Recommended gear oil:

Hypoid gear oil SAE#90

Gear oil quantity:

0.430 L (0.455 US qt, 0.378 Imp.qt)

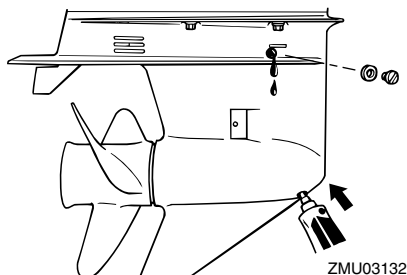

6. Put a new gasket on the oil level plug. When the oil begins to flow out of the oil level plug hole, insert and tighten the oil level plug.

Tightening torque:

9 Nm (0.9 kgf-m, 6.6 ft-lb)

7. Put a new gasket on the gear oil drain screw. Insert and tighten the gear oil drain screw.

Tightening torque:

9 Nm (0.9 kgf-m, 6.6 ft-lb)

EMU29302

## Cleaning fuel tank

EWMM00920



## WARNING


Gasoline is highly flammable, and its vapors are flammable and explosive.

- If you have any question about properly doing this procedure, consult your Yamaha dealer.
- Keep away from sparks, cigarettes,


flames, or other sources of ignition when cleaning the fuel tank.

- Remove the fuel tank from the boat before cleaning it. Work only outdoors in an area with good ventilation.
- Wipe up any spilled fuel immediately.
- Reassemble the fuel tank carefully. Improper assembly can result in a fuel leak, which could result in a fire or explosion hazard.
- Dispose of old gasoline according to local regulations.

1. Empty the fuel tank into an approved container.
2. Pour a small amount of suitable solvent into the tank. Install the cap and shake the tank. Drain the solvent completely.
3. Remove the screws holding the fuel joint assembly. Pull the assembly out of the tank.

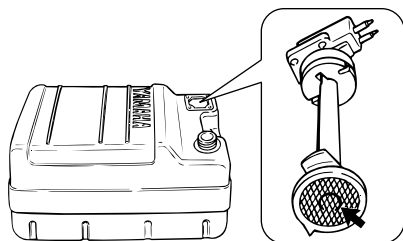

ZMU02324

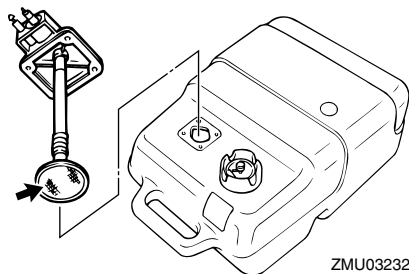

ZMU03232

4. Clean the filter (located on the end of the suction pipe) in a suitable cleaning solvent. Allow the filter to dry.
5. Replace the gasket with a new one. Reinstall the fuel joint assembly and tighten the screws firmly.

EMU29312

## Inspecting and replacing anode(s)

Yamaha outboard motors are protected from corrosion by sacrificial anodes. Inspect the external anodes periodically. Remove scales from the surfaces of the anodes. Consult a Yamaha dealer for replacement of external anodes.


ECM00720

### NOTICE

**Do not paint anodes, as this would render them ineffective.**


### TIP:

Inspect ground leads attached to external anodes on equipped models. Consult a Yamaha dealer for inspection and replacement of internal anodes attached to the power unit.

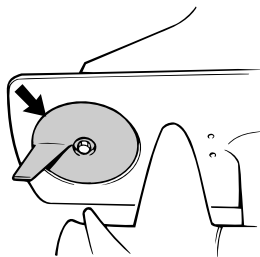


ZMU03134

# Maintenance

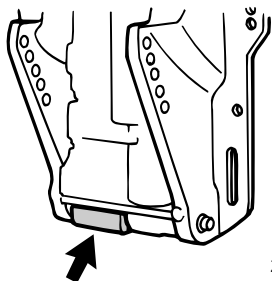

ZMU03135

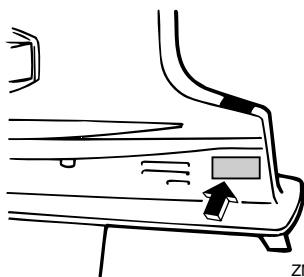

ZMU03418

EMU29322

## Checking battery (for electric start models)

EWMO1900

### **WARNING**

Battery electrolytic fluid is poisonous and caustic, and batteries generate explosive hydrogen gas. When working near the battery:

- Wear protective eye gear and rubber gloves.
- Do not smoke or bring any other source of ignition near the battery.

Refer to page 12 for detailed safety information about batteries.

The procedure for checking the battery varies for different batteries. This procedure contains typical checks that apply to many batteries, but you should always refer to the


battery manufacturer's instructions.

ECM01920

### **NOTICE**

**A poorly maintained battery will quickly deteriorate.**

1. Check the electrolyte level.

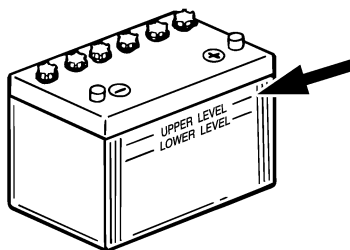

ZMU01810

2. Check the battery's charge. If your boat is equipped with the digital speedometer, the voltmeter and low battery alert functions will help you monitor the battery's charge. If the battery needs charging, consult your Yamaha dealer.
3. Check the battery connections. They should be clean, secure, and covered by an insulating cover. **WARNING! Bad connections can produce shorting or arcing and cause an explosion.**

[EWMO1910]

EMU29333

## Connecting the battery

EWMO0570

### **WARNING**

Mount the battery holder securely in a dry, well-ventilated, vibration-free location in the boat. Install a fully charged battery in the holder.


ECM01123

### **NOTICE**

**Reversal of the battery cables will damage the electrical parts.**



1. Make sure the main switch (on applicable models) is “OFF” (off) before working on the battery.
2. Connect the red battery cable to the POSITIVE (+) terminal first. Then connect the black battery cable to the NEGATIVE (-) terminal.

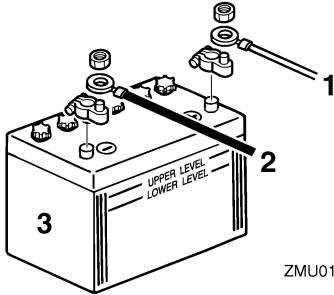

ZMU01811

1. Red cable
  2. Black cable
  3. Battery
3. The electrical contacts of the battery and cables must be clean and properly connected, or the battery will not start the engine.

EMU29371

## Disconnecting the battery

1. Turn off the battery cut-off switch (if equipped) and main switch. **NOTICE: If they are left on, the electrical system can be damaged.** [ECM01930]
2. Disconnect the negative cable(s) from the negative (-) terminal. **NOTICE: Always disconnect all negative (-) cables first to avoid a short circuit and damage to the electrical system.** [ECM01940]
3. Disconnect the positive cable(s) and remove the battery from the boat.
4. Clean, maintain, and store the battery according to the manufacturer's instruc-

# Trouble Recovery

---

EMU29427

## Troubleshooting

A problem in the fuel, compression, or ignition systems can cause poor starting, loss of power, or other problems. This section describes basic checks and possible remedies, and covers all Yamaha outboard motors. Therefore some items may not apply to your model.

If your outboard motor requires repair, bring it to your Yamaha dealer.

If the engine trouble-alert indicator is flashing, consult your Yamaha dealer.

### **Starter will not operate.**

Q. Is battery capacity weak or low?

A. Check battery condition. Use battery of recommended capacity.

Q. Are battery connections loose or corroded?

A. Tighten battery cables and clean battery terminals.

Q. Is fuse for electric start relay or electric circuit blown?

A. Check for cause of electric overload and repair. Replace fuse with one of correct amperage.

Q. Are starter components faulty?

A. Have serviced by a Yamaha dealer.

Q. Is shift lever in gear?

A. Shift to neutral.

### **Engine will not start (starter operates).**

Q. Is fuel tank empty?

A. Fill tank with clean, fresh fuel.

Q. Is fuel contaminated or stale?

A. Fill tank with clean, fresh fuel.

Q. Is fuel filter clogged?

A. Clean or replace filter.

Q. Is starting procedure incorrect?

A. See page 47.

Q. Has fuel pump malfunctioned?

A. Have serviced by a Yamaha dealer.

Q. Are spark plug(s) fouled or of incorrect type?

A. Inspect spark plug(s). Clean or replace with recommended type.

Q. Are spark plug cap(s) fitted incorrectly?

A. Check and re-fit cap(s).

Q. Is ignition wiring damaged or poorly connected?

A. Check wires for wear or breaks. Tighten all loose connections. Replace worn or broken wires.

Q. Are ignition parts faulty?

A. Have serviced by a Yamaha dealer.

Q. Is engine shut-off cord (lanyard) not attached?

A. Attach cord.

Q. Are engine inner parts damaged?

A. Have serviced by a Yamaha dealer.

### **Engine idles irregularly or stalls.**

Q. Are spark plug(s) fouled or of incorrect type?

A. Inspect spark plug(s). Clean or replace with recommended type.

Q. Is fuel system obstructed?

A. Check for pinched or kinked fuel line or other obstructions in fuel system.

Q. Is fuel contaminated or stale?

A. Fill tank with clean, fresh fuel.

Q. Is fuel filter clogged?

A. Clean or replace filter.

Q. Have ignition parts failed?

A. Have serviced by a Yamaha dealer.

Q. Has alert system activated?

A. Find and correct cause of alert.

Q. Is spark plug gap incorrect?

A. Inspect and adjust as specified.

Q. Is ignition wiring damaged or poorly connected?

A. Check wires for wear or breaks. Tighten all loose connections. Replace worn or broken wires.

Q. Is specified engine oil not being used?

A. Check and replace oil as specified.

Q. Is thermostat faulty or clogged?

A. Have serviced by a Yamaha dealer.

Q. Are carburetor adjustments incorrect?

A. Have serviced by a Yamaha dealer.

Q. Is fuel pump damaged?

A. Have serviced by a Yamaha dealer.

Q. Is air vent screw on fuel tank closed?

A. Open air vent screw.

Q. Is choke knob pulled out?

A. Return to home position.

Q. Is motor angle too high?

A. Return to normal operating position.

Q. Is carburetor clogged?

A. Have serviced by a Yamaha dealer.

Q. Is fuel joint connection incorrect?

A. Connect correctly.

Q. Is throttle valve adjustment incorrect?

A. Have serviced by a Yamaha dealer.

Q. Is battery cable disconnected?

A. Connect securely.

## **Alert buzzer sounds or indicator lights.**

Q. Is cooling system clogged?

A. Check water intake for restriction.

Q. Is engine oil level low?

A. Fill oil tank with specified engine oil.

Q. Is heat range of spark plug incorrect?

A. Inspect spark plug and replace it with recommended type.

Q. Is specified engine oil not being used?

A. Check and replace oil with specified type.

Q. Is engine oil contaminated or deteriorated?

A. Replace oil with fresh, specified type.

Q. Is oil filter clogged?

A. Have serviced by a Yamaha dealer.

Q. Has oil feed/injection pump malfunctioned?

A. Have serviced by a Yamaha dealer.

# Trouble Recovery

---

Q. Is load on boat improperly distributed?

A. Distribute load to place boat on an even plane.

Q. Is water pump or thermostat faulty?

A. Have serviced by a Yamaha dealer.

Q. Is there excess water in fuel filter cup?

A. Drain filter cup.

## **Engine power loss.**

Q. Is propeller damaged?

A. Have propeller repaired or replaced.

Q. Is propeller pitch or diameter incorrect?

A. Install correct propeller to operate out-board at its recommended speed (r/min) range.

Q. Is trim angle incorrect?

A. Adjust trim angle to achieve most efficient operation.

Q. Is motor mounted at incorrect height on transom?

A. Have motor adjusted to proper transom height.

Q. Has alert system activated?

A. Find and correct cause of alert.

Q. Is boat bottom fouled with marine growth?

A. Clean boat bottom.

Q. Are spark plug(s) fouled or of incorrect type?

A. Inspect spark plug(s). Clean or replace with recommended type.

Q. Are weeds or other foreign matter tangled

on gear housing?

A. Remove foreign matter and clean lower unit.

Q. Is fuel system obstructed?

A. Check for pinched or kinked fuel line or other obstructions in fuel system.

Q. Is fuel filter clogged?

A. Clean or replace filter.

Q. Is fuel contaminated or stale?

A. Fill tank with clean, fresh fuel.

Q. Is spark plug gap incorrect?

A. Inspect and adjust as specified.

Q. Is ignition wiring damaged or poorly connected?

A. Check wires for wear or breaks. Tighten all loose connections. Replace worn or broken wires.

Q. Have electrical parts failed?

A. Have serviced by a Yamaha dealer.

Q. Is specified fuel not being used?

A. Replace fuel with specified type.

Q. Is specified engine oil not being used?

A. Check and replace oil with specified type.

Q. Is thermostat faulty or clogged?

A. Have serviced by a Yamaha dealer.

Q. Is air vent screw closed?

A. Open the air vent screw.

Q. Is fuel pump damaged?

A. Have serviced by a Yamaha dealer.

# Trouble Recovery

Q. Is fuel joint connection incorrect?

A. Connect correctly.

Q. Is heat range of spark plug incorrect?

A. Inspect spark plug and replace it with recommended type.

Q. Is high pressure fuel pump drive belt broken?

A. Have serviced by a Yamaha dealer.

Q. Is engine not responding properly to shift lever position?

A. Have serviced by a Yamaha dealer.

## **Engine vibrates excessively.**

Q. Is propeller damaged?

A. Have propeller repaired or replaced.

Q. Is propeller shaft damaged?

A. Have serviced by a Yamaha dealer.

Q. Are weeds or other foreign matter tangled on propeller?

A. Remove and clean propeller.

Q. Is motor mounting bolt loose?

A. Tighten bolt.

Q. Is steering pivot loose or damaged?

A. Tighten or have serviced by a Yamaha dealer.

EMU29433

## **Temporary action in emergency**

EMU29440

### **Impact damage**

EWMO0870



The outboard motor can be seriously damaged by a collision while operating or

**trailing. Damage could make the outboard motor unsafe to operate.**

If the outboard motor hits an object in the water, follow the procedure below.



1. Stop the engine immediately.
2. Inspect the control system and all components for damage. Also inspect the boat for damage.
3. Whether damage is found or not, return to the nearest harbor slowly and carefully.
4. Have a Yamaha dealer inspect the outboard motor before operating it again.

EMU29463

### **Replacing fuse**


If the fuse has blown on an electric start model, open the fuse holder and replace the fuse with a new one of the proper amperage.

EWMO0631



**Substituting an incorrect fuse or a piece of wire could allow excessive current flow. This could cause electric system damage and a fire hazard.**

# Trouble Recovery

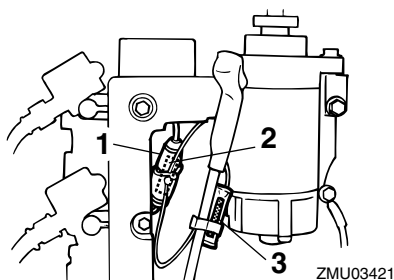

1. Fuse holder
2. Fuse (20 A)
3. Spare fuse (20 A)


Consult your Yamaha dealer if the new fuse immediately blows again.

EMU29524

## Power trim and tilt will not operate

If the engine cannot be tilted up or down with the power trim and tilt because of a discharged battery or a failure with the power trim and tilt unit, the engine can be tilted manually.

1. Loosen the manual valve screw by turning it counterclockwise until it stops.

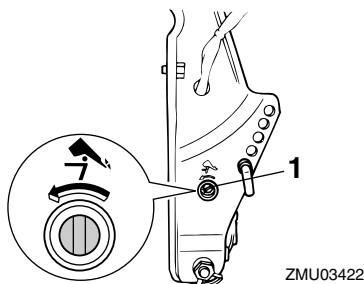

1. Manual valve screw
2. Put the engine in the desired position, then tighten the manual valve screw by turning it clockwise.

EMU29533

## Starter will not operate

If the starter mechanism does not operate (the engine cannot be cranked with the starter), the engine can be started with an emergency starter rope.

EWMO1022

### WARNING

- Use this procedure only in an emergency to return to the nearest port for repairs.
- When the emergency starter rope is used to start the engine, the start-in-gear protection device does not operate. Make sure the remote control lever is in neutral. Otherwise the boat could unexpectedly start to move, which could result in an accident.
- Attach the engine shut-off cord to a secure place on your clothing, or your arm or leg while operating the boat.
- Do not attach the cord to clothing that could tear loose. Do not route the cord where it could become entangled, preventing it from functioning.
- Avoid accidentally pulling the cord during normal operation. Loss of engine power means the loss of most steering control. Also, without engine power, the boat could slow rapidly. This could cause people and objects in the boat to be thrown forward.
- Make sure no one is standing behind you when pulling the starter rope. It could whip behind you and injure someone.
- An unguarded, rotating flywheel is very dangerous. Keep loose clothing and other objects away when starting the engine. Use the emergency starter rope only as instructed. Do not touch the fly-

# Trouble Recovery


wheel or other moving parts when the engine is running. Do not install the starter mechanism or top cowling after the engine is running.

- Do not touch the ignition coil, spark plug wire, spark plug cap, or other electrical components when starting or operating the motor. You could get an electrical shock.

EMU29562


## Emergency starting engine

1. Remove the top cowling.
2. Remove the start-in-gear protection cable from the starter, if equipped.

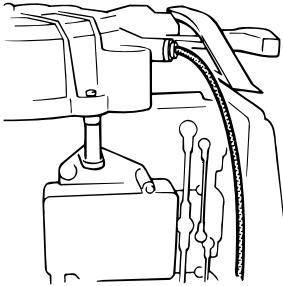

ZMU03425


1. Choke cable
2. Start-in-gear protection cable
3. Remove the starter/flywheel cover after removing the bolt(s).

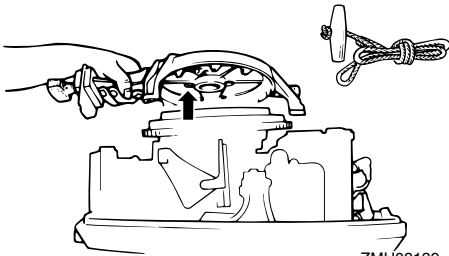


ZMU03139

4. Prepare the engine for starting. For further information, see page 47. Be sure

the engine is in neutral and that the clip is attached to the engine shut-off switch. The main switch must be "ON" (on), if equipped.

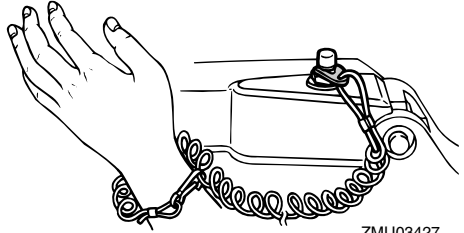


ZMU03427

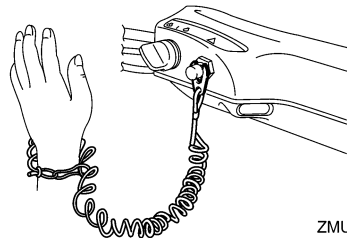

ZMU05216


5. If equipped the choke knob, pull out it when the engine is cold. After the engine starts, gradually return the choke knob to its home position as the engine warms up.

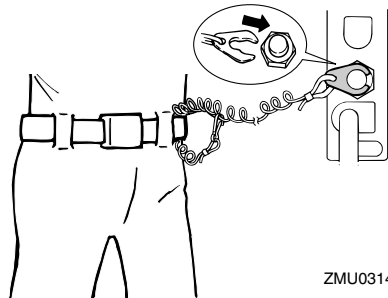


ZMU03140

# Trouble Recovery

6. Insert the knotted end of the emergency starter rope into the notch in the flywheel rotor and wind the rope several turns around the flywheel clockwise.

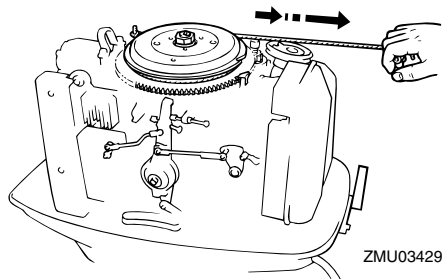

7. Give a strong pull straight out to crank and start the engine. Repeat if necessary.

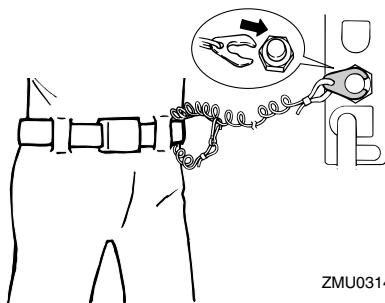

EMU29671

## Engine fails to operate

EMU29706

### Cold engine fails to start

If the engine fails to start when it is cold, use the following procedure.


EWMO0410

#### **WARNING**

When starting or operating the engine, do not touch the ignition coil, spark plug wire, spark plug cap, or other electrical parts carrying high voltage. Keep loose clothing and other objects away from the engine when starting it. Do not touch the

### flywheel or other moving parts when the engine is running.

1. Adjust the trim angle so that the drive shaft is at right angles to the water surface or is trimmed in.
2. On models equipped with an emergency starter valve, open it. The valve is located behind the silencer cover on the front of the engine.

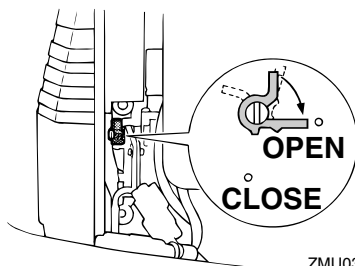


3. Squeeze the primer pump two or three times to feed fuel.




4. Open the throttle slightly without shifting using the throttle grip, neutral throttle lever or free accelerator. It is necessary to change the throttle opening slightly depending on the engine temperature. After the engine starts, return the throttle to its original position.



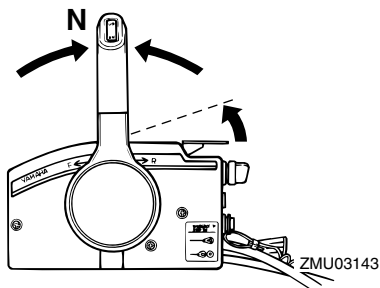


5. Turn the main switch to “ON” (on).

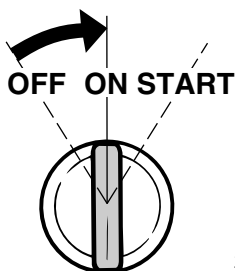


6. Turn the main switch to “START” (start). **NOTICE:** Never turn the main switch to “START” (start) while the engine is running. Do not keep the starter motor turning for more than 5 seconds. If the starter motor is turned continuously for more than 5 seconds, the battery will be quickly discharged, thus making it impossible to start the engine. The starter can also be damaged. If the engine will not start after 5 seconds of cranking, return the main switch to “ON” (on), wait 10 seconds, then crank the engine again.

[ECM00192]

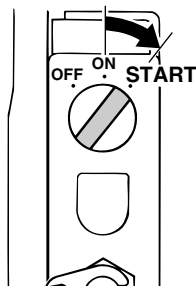

7. After the engine starts, close the emergency starter valve (if used), then return the throttle to its original position.

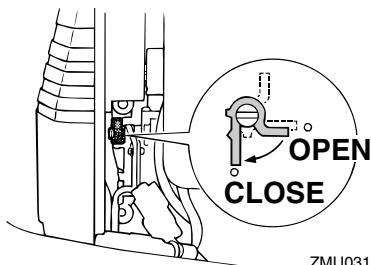

## TIP:

When the starter mechanism malfunctions, see page 88.

EMU33501

## Treatment of submerged motor

If the outboard motor is submerged, immediately take it to a Yamaha dealer. Otherwise some corrosion may begin almost immediately. **NOTICE:** Do not attempt to run the outboard motor until it has been completely inspected. [ECM00401]



Printed in Japan  
April 2008—0.1 × 1 

Printed on recycled paper